



Made To
Connect

DUAL SSID SETUP SOP

WPA2 + WPA3 Configuration - Frontline Portal
Field Technician Reference | Internal Use Only

New Standard: Use this procedure when a customer has older devices - primarily printers, OTT devices, or other CPE - that will not connect successfully to, or remain stable on, WPA3 Transition mode. At install, when a node is added in Frontline and the first SSID is created, it will default to WPA3 Transition.

IMPORTANT NOTE: This procedure is primarily for technician installs and trouble calls where it is determined that the customer has OTT or other devices that would benefit from a separate WPA2 network. If the customer has Plume Home/HomePass, creating a guest network will also create a WPA2 network separate from the existing WPA3 network, however, guest networks cannot have the same password as the main SSID. That said, please only use Frontline.

SSID Naming Standard

Use the source standard below when creating the additional WPA3 SSID. **Do not use "-2" as the SOP naming standard.**

Network	Security	SSID Format
Original / Legacy-compatible network	WPA2	<SmithFamilyWiFi-2>
Added secure network	WPA3	< SmithFamilyWiFi>

Customer Explanation

Suggested script: "Your main Wi-Fi name hasn't changed. Most devices will reconnect automatically.

If something doesn't connect, use the network that ends in '-2'." Keep in mind you'll need to first forget the network on those devices, then join the network that ends in '-2'.


Prerequisites

Requirement	Details
Frontline account access	Technician must be able to access the customer account and Health Check / SSID area in Frontline Tier 2/3.
Customer Wi-Fi password	The current network password is required to continue. Work with the customer to confirm it.
Customer password lookup	If the customer does not know the password off hand, they can see it in Plume Home/HomePass. (Note: FSC cannot see customer's password).

Main Procedure - Frontline Steps on an Install

Step 1 - Open the Customer Account


- Go to Health Check / SSID in Frontline. (By default, Frontline will set the router to WPA3).

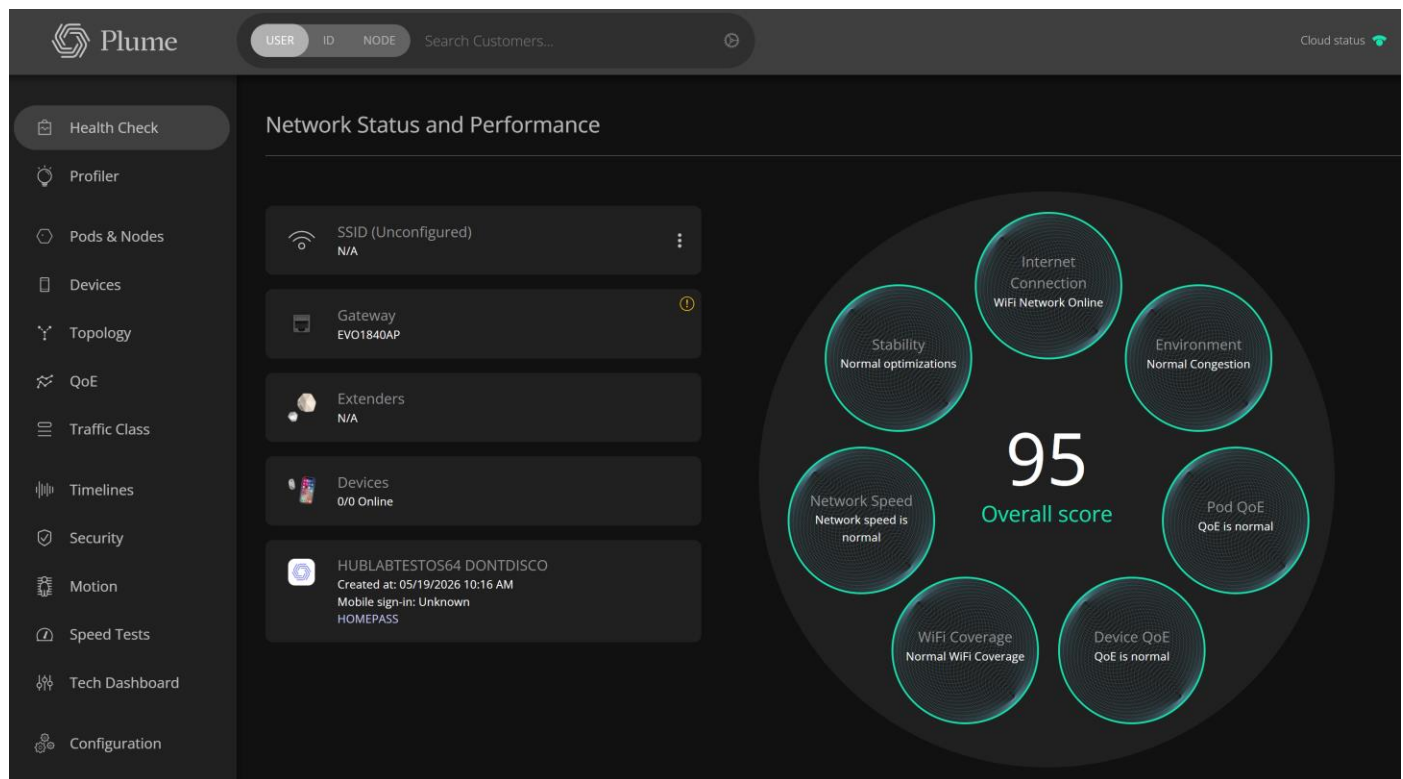

Keep in mind that once you've added the SSID and Password, Frontline will by default set the router to the WPA3 Transition standard. This is okay as it is the norm.


Step 2 - Start the WPA2 Transition

- Under Network Configuration, click Encryption: WPA2 to start the transition process.
- Remember by default, Frontline will set this as WPA3. Proceed to set up the SSID & PSWD.

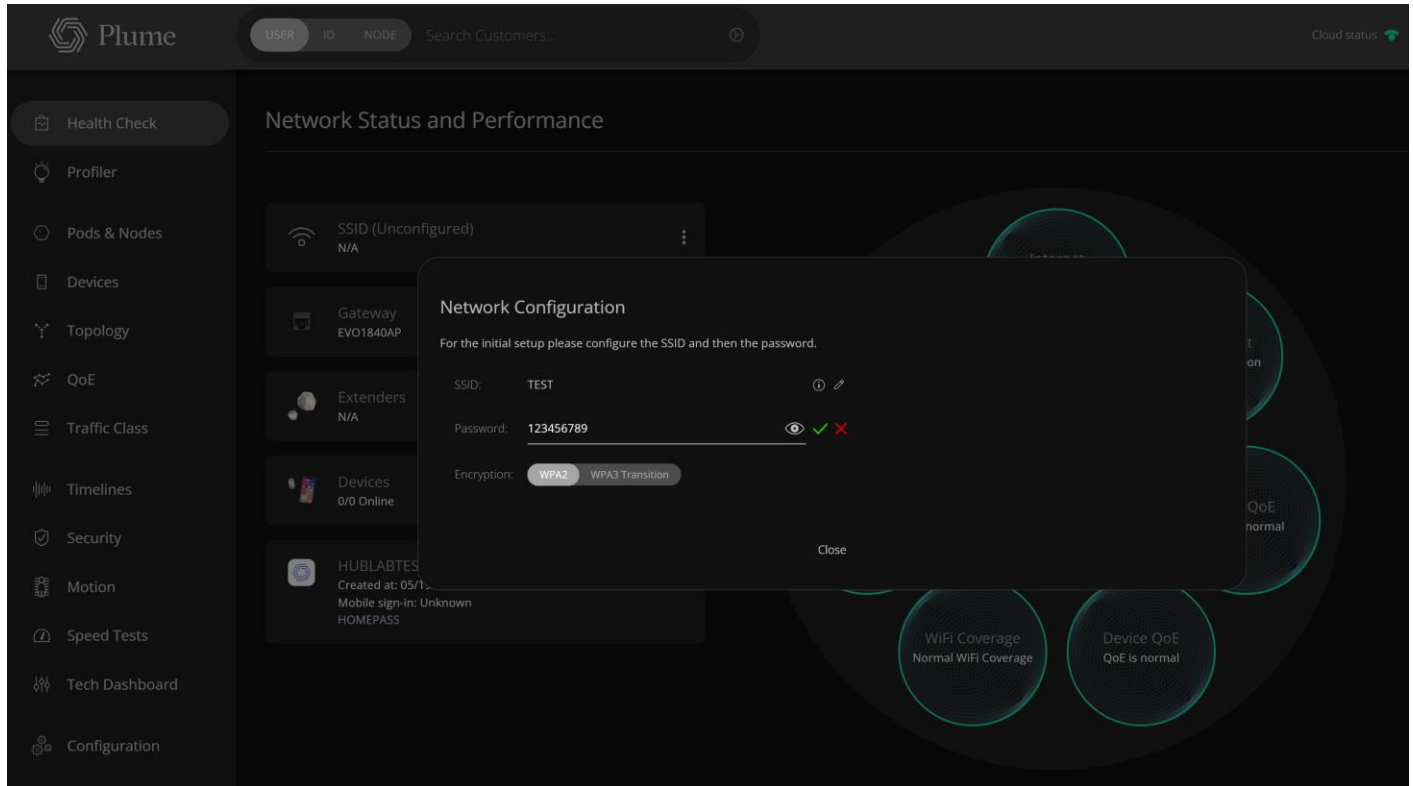


Step 3 - Confirm with the Current Password

- At the Attention prompt, click Confirm.
- Enter the Wi-Fi password at the next prompt, then click the green checkmark.

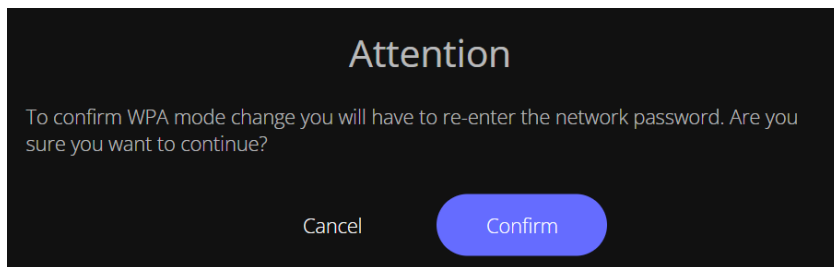


Step 4 - Allow Frontline to Generate “Recommendation”

- After confirming the password, Frontline generates a recommendation to Replace WPA2 SSID with WPA3 SSID and exposes Advanced Configuration.
- Do NOT execute the “replace recommendation” as the final result. The goal is to create a separate WPA3 SSID while keeping the WPA2 SSID available.


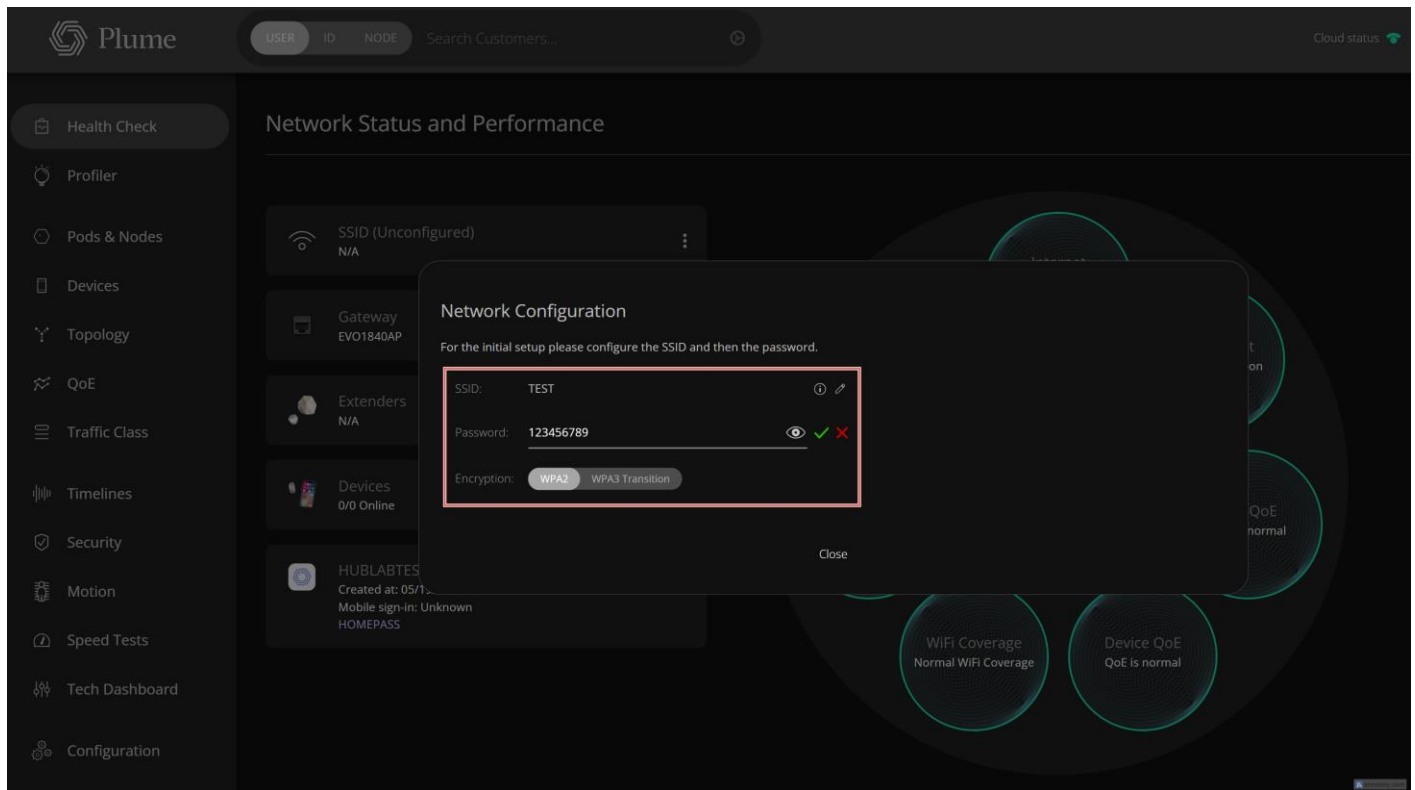


Note: In the screenshot above, when adding in SSID & PSWD, do NOT click on WPA3 Transition. Once you add both the SSID & PSWD, Frontline will automatically set it to WPA3 Transition by default as shown below.

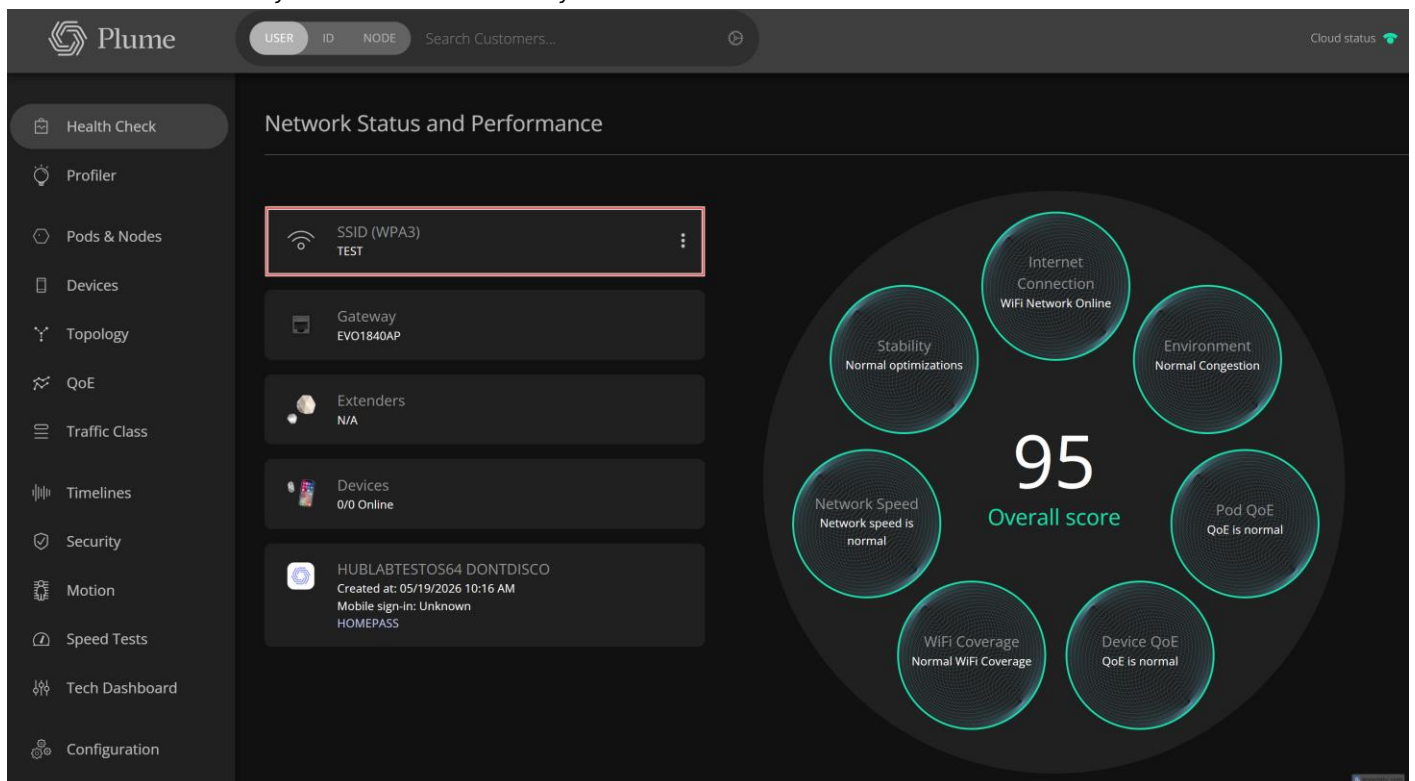


Step 5 – Switch the WPA3 back to WPA2

- Next, click on the WPA2 Encryption to toggle that on and click on confirm on the pop up.
- This step is required in order to establish the WPA3 Network while keeping the WPA2 separate.

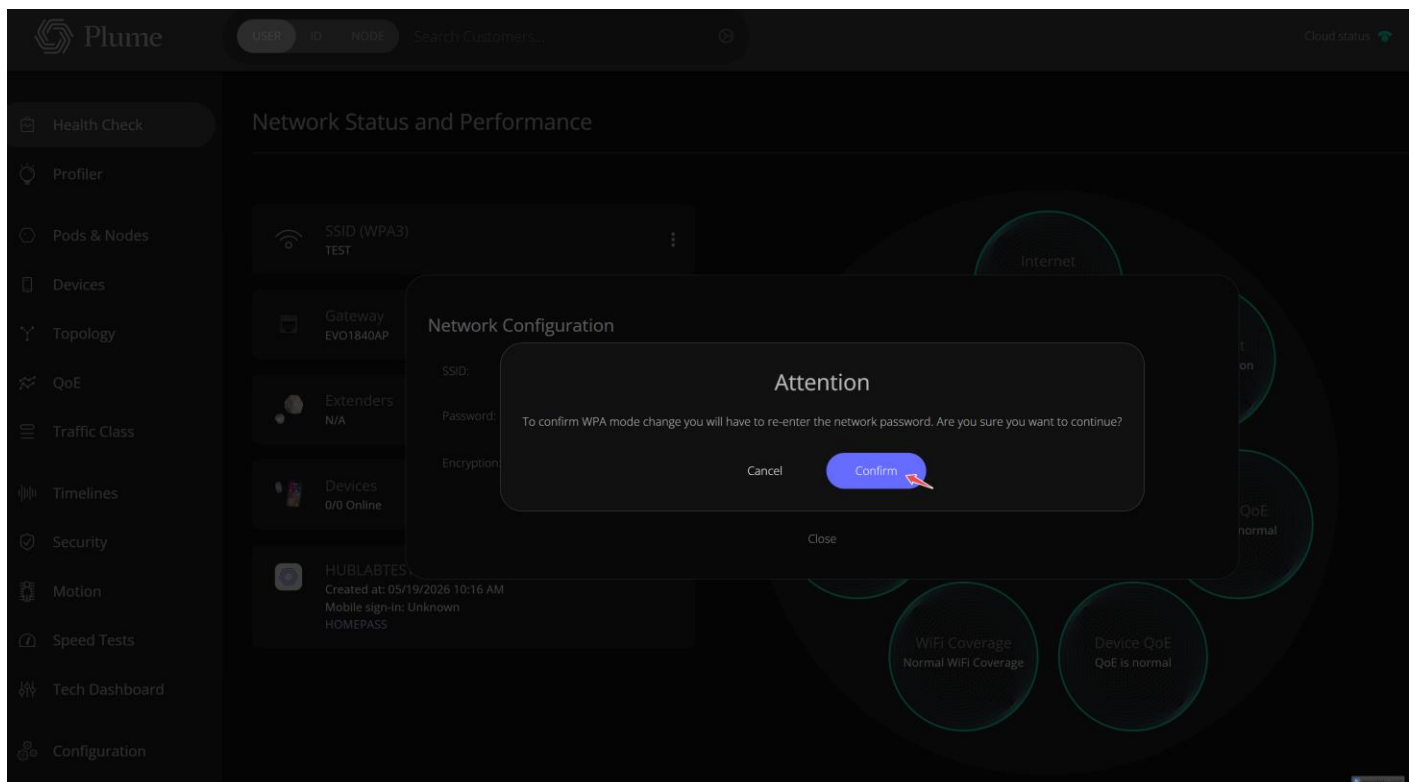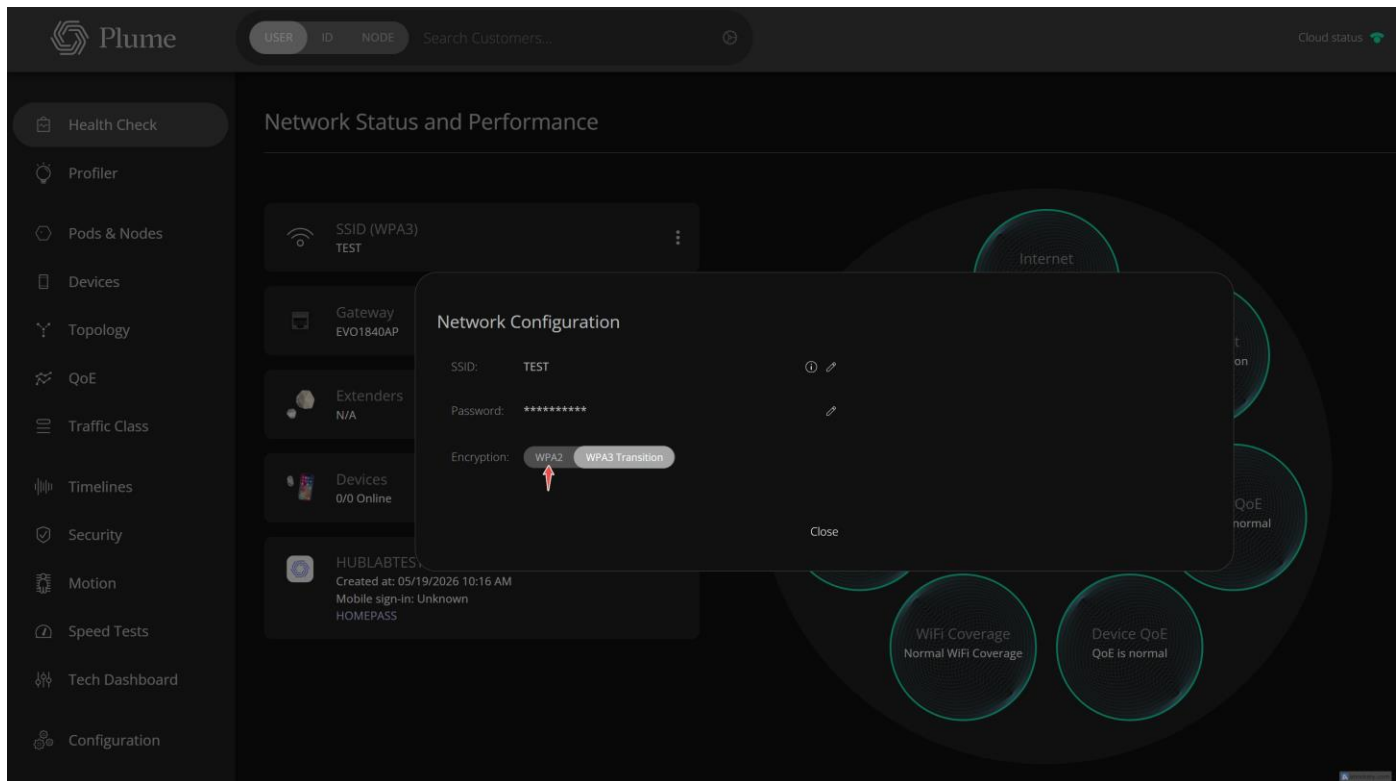


Step 6 - Refresh the Account

- Next enter in the password but DO NOT touch the SSID name at this point.

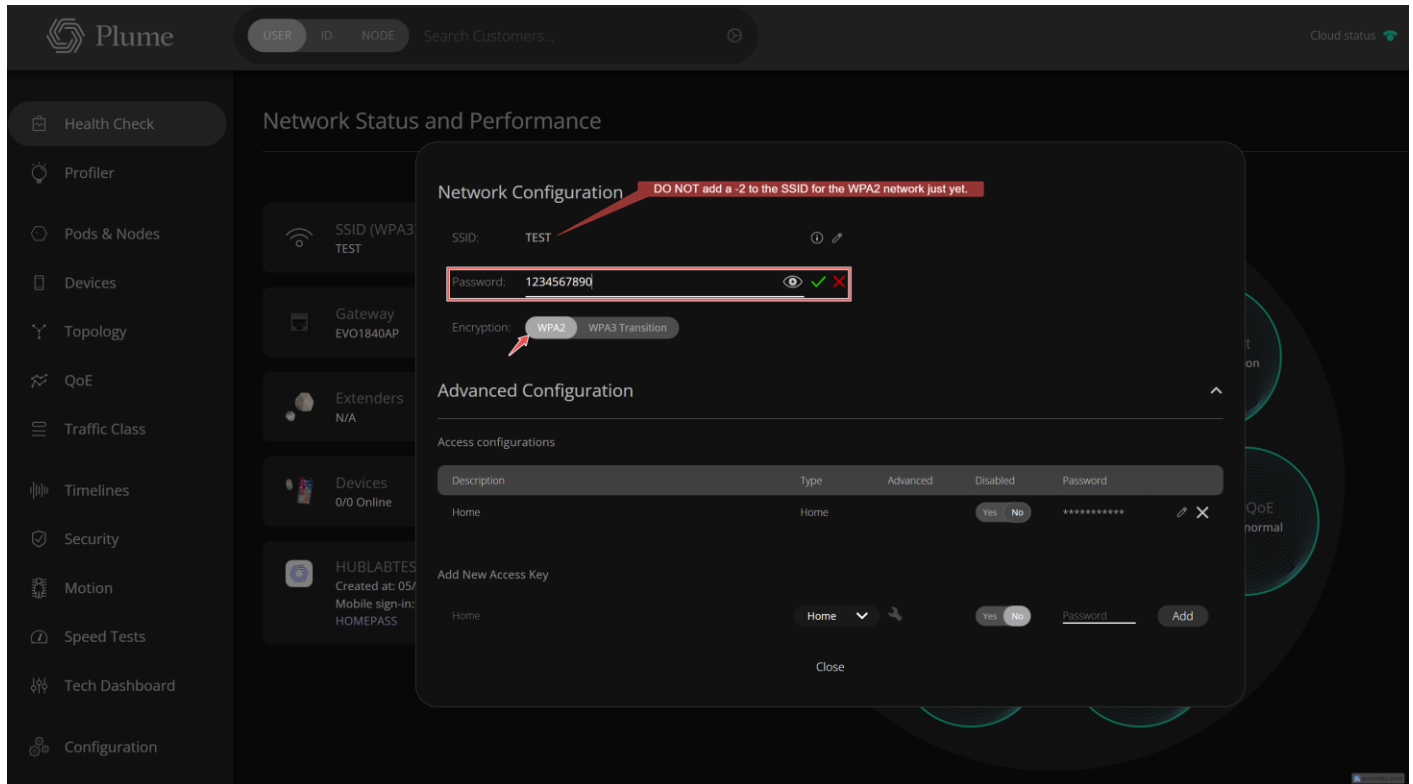


Refresh the browser window or search the customer account again. Now add the -2 at the end of the SSID.

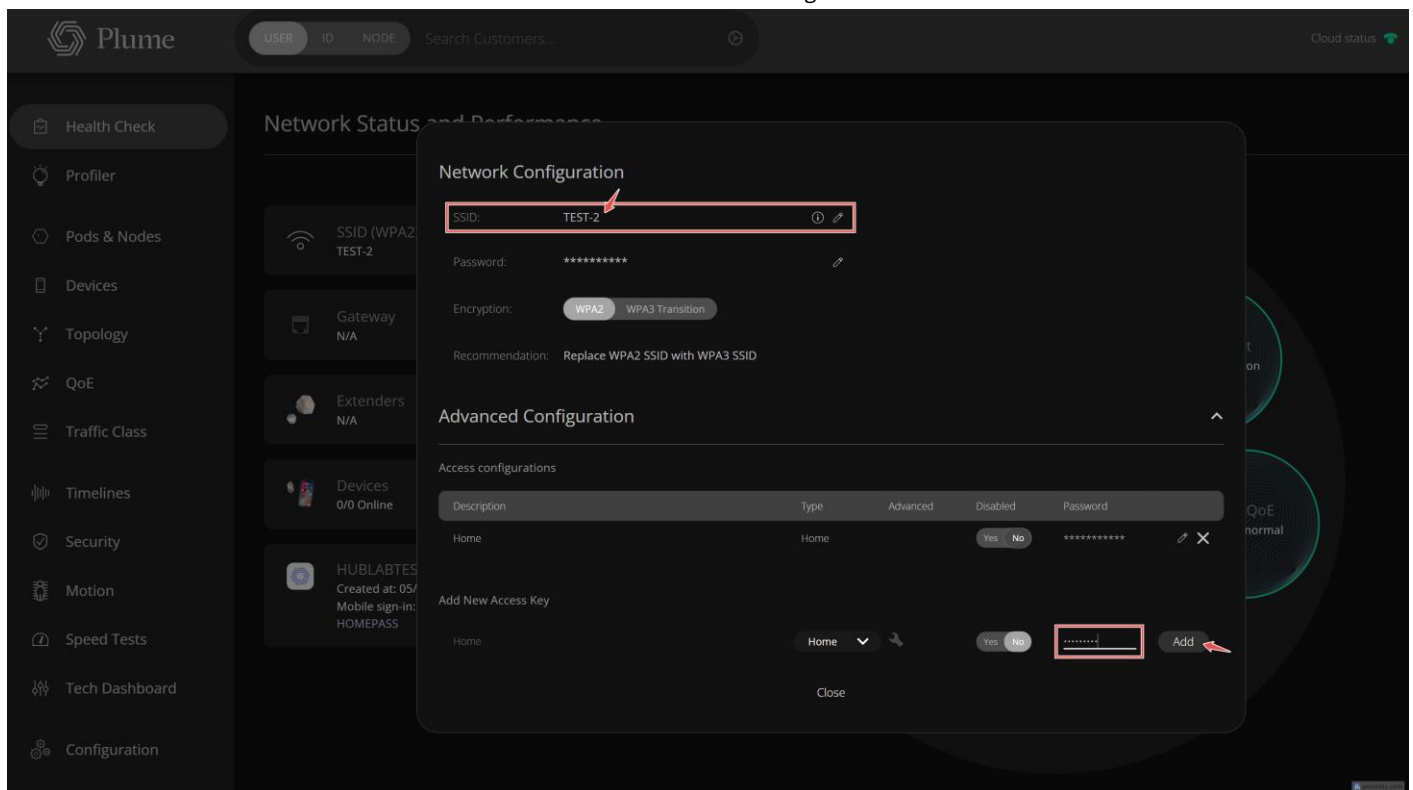


Next, create a random password different from what you created, use something like 987654321 and click on the add button. This is temporary, think of it like a placeholder for the WPA3 SSID you'll create here shortly. Also you may need to scroll down to see the add button depending on the size of the screen of your device.

Step 7 - Execute and Add the WPA3 SSID

- Refresh the browser then click the Execute button, next to the Add WPA3 SSID recommendation.
- Add the new SSID using the existing SSID name without -2 added to the end.
- This creates two SSIDs on the account: one for WPA2 SSID & another for WPA3 SSID.

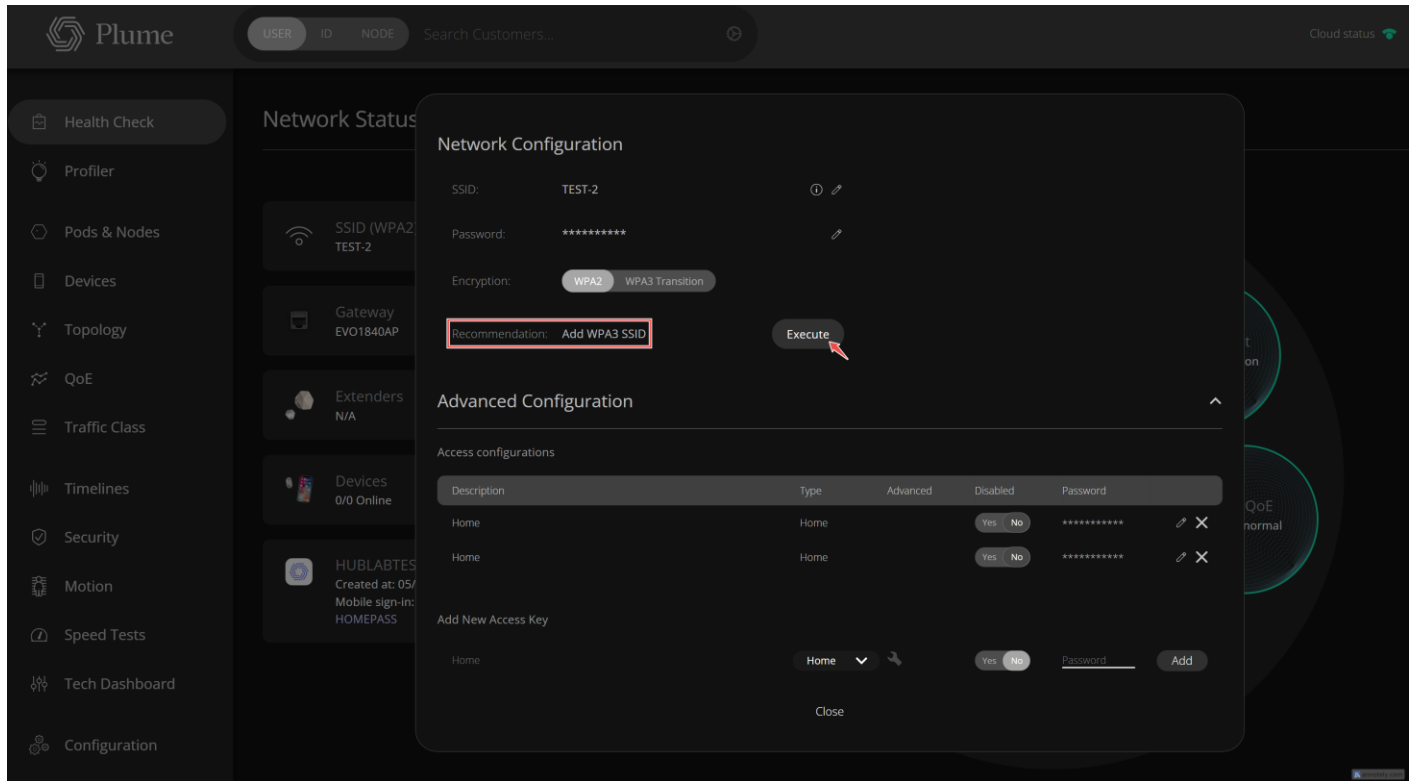


Important: DO NOT change the SSID name on the screen below. It needs to be created without the -2 at the end.

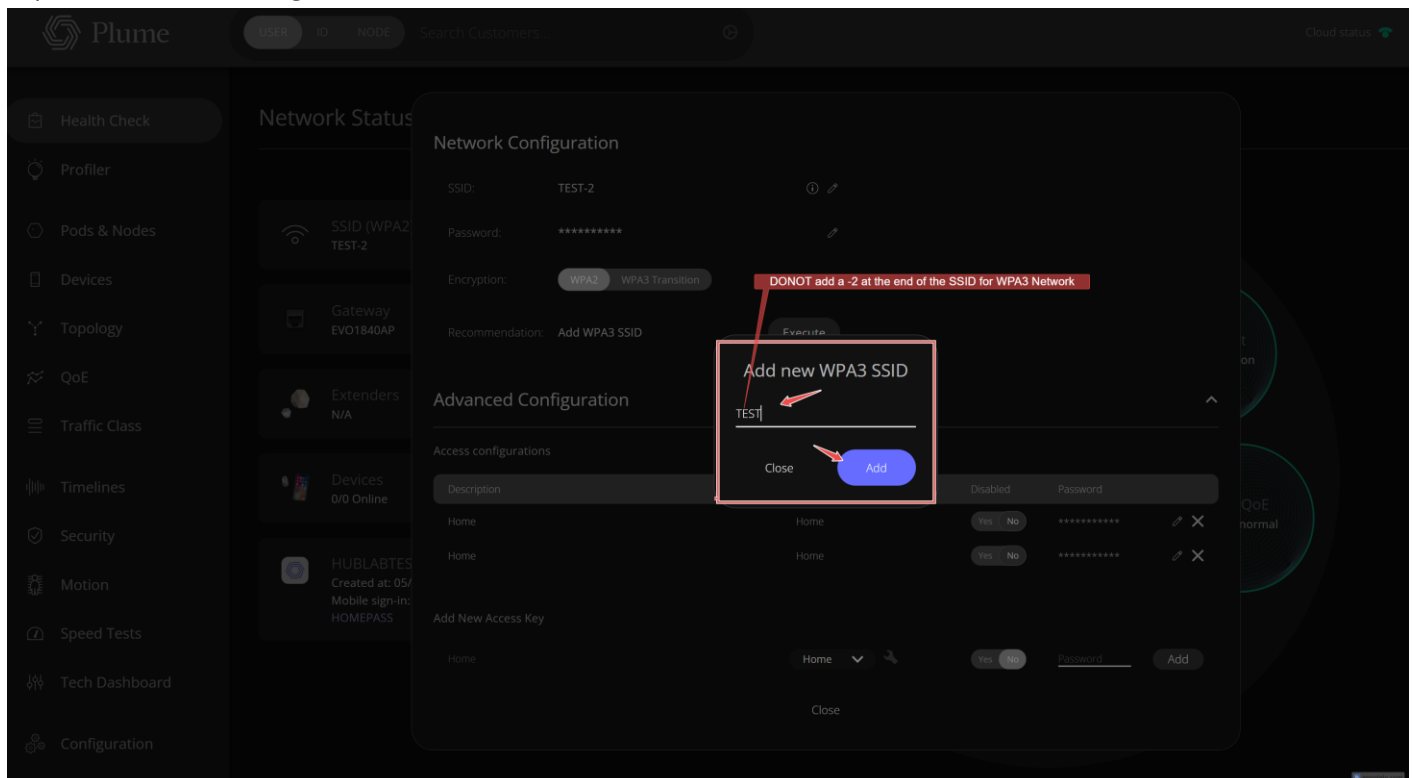


Set the Access Key for WPA3

- Add the same password used for the WPA2 SSID here and click on the Add button.

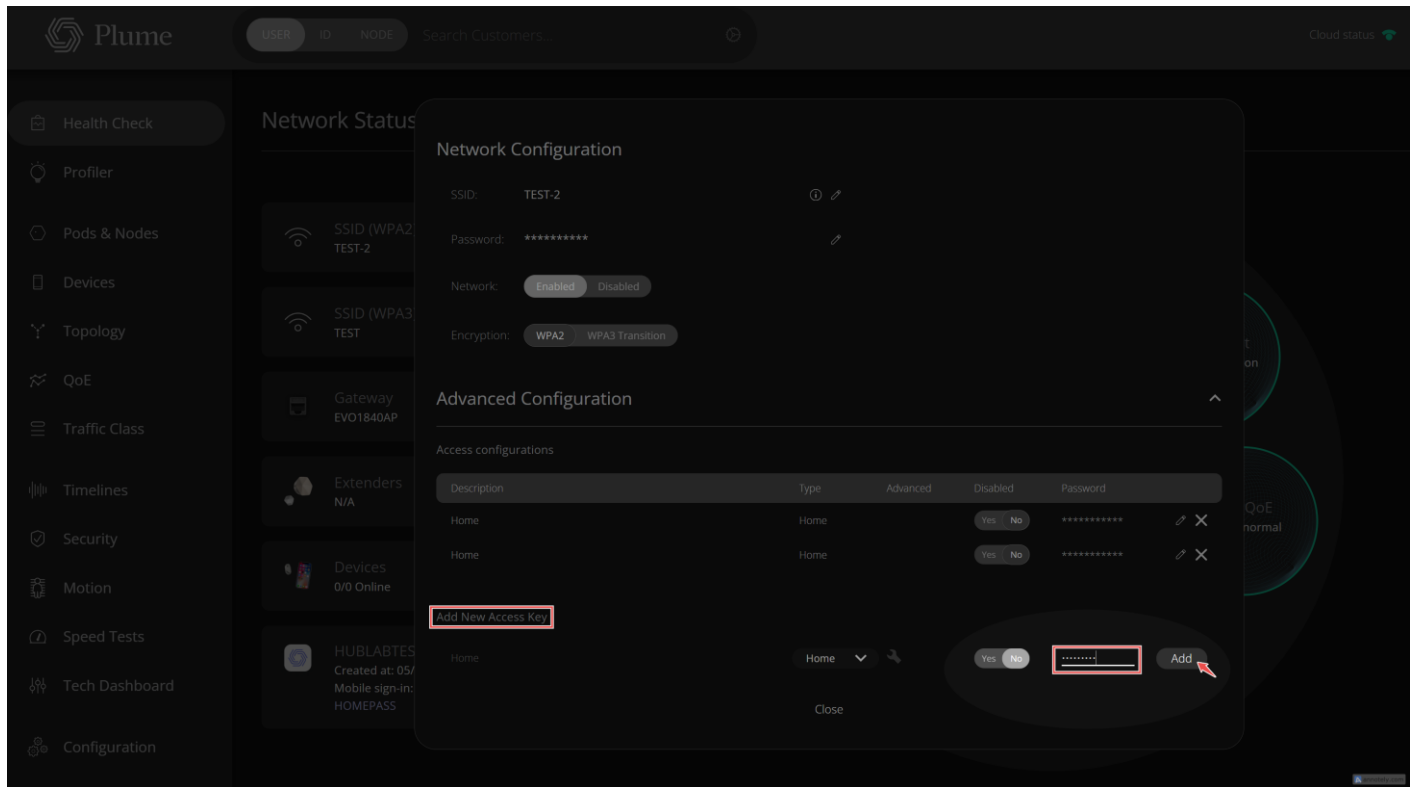

Step 8 - Clean Up the Temporary Access Key


- Go back to the SSID (WPA2) configuration.
- Delete the temporary second access configuration that was created previously.
- Only leave the intended WPA2 and WPA3 SSID configurations in place. It'll always be the last one at the bottom. Leaving only 2. 1 for WPA2 and the other for WPA3. The temporary one, the placeholder, is what you're deleting.

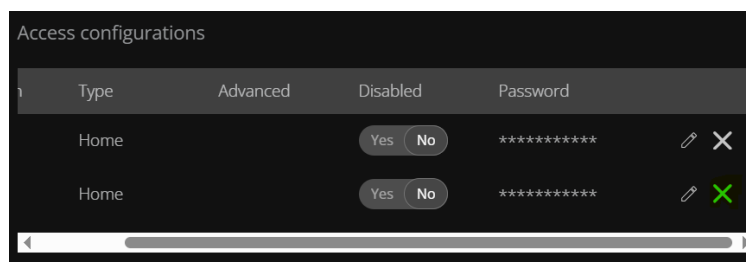

Delete the temporary second access configuration

You should now have 2 Split Networks

- Go back to Health Check and your screen should look similar to the screenshot below.
- You'll need to forget the network on the customer's older devices and join the -2 SSID network.
- The new devices may automatically connect to the SSID without the -2. If not, forget the network and join it.

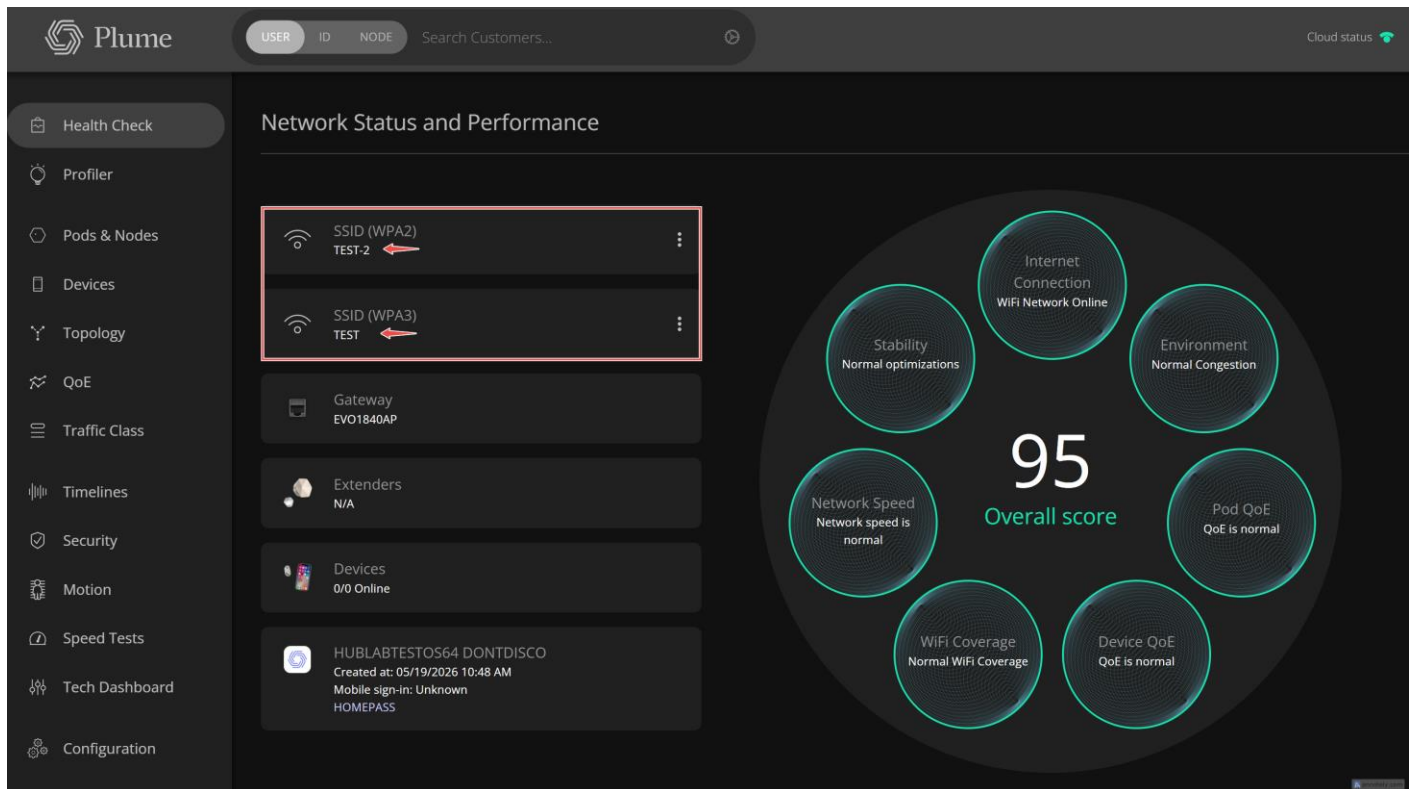

Final Verification Checklist

- Customer account shows two SSIDs.
- WPA2 SSID remains available for older devices, printers, OTT devices, and other CPE that do not stay stable on WPA3 Transition. See the list below for some examples of older devices that work best on WPA2.
- WPA3 SSID is the primary network without the -2 at the end. Best for newer devices.
- Temporary access key/password entry has been deleted from the WPA2 Advanced Configuration.
- Customer has been advised which SSID should be used for older devices versus newer devices.

Use the Legacy Device Reference below to help gauge which devices may benefit from WPA2 over WPA3. Then connect the devices accordingly after you've forgotten the network and joined the corresponding network based on their device.

Legacy Device Reference — Devices That Stay on WPA2


Use this table to identify devices that should remain on the original WPA2 network. If a customer has any of these, a dual SSID setup is recommended.

Device Category		Device Types	Common Brands / Examples
	Printers & Scanners	All-in-one inkjet/laser printers, standalone scanners, label printers	HP, Epson, Canon, Brother, Xerox — virtually all models regardless of age. As of 2025, WPA3 is not supported by the vast majority of consumer and business printers.
	Smart Home Devices	Smart plugs, smart bulbs, smart switches, dimmers, outlets	TP-Link Kasa (2016–2024), Wemo (2012–2024), Lutron Caseta (2014–2024), GE Cync (2020–2023), Philips Hue (all bridge generations through 2024) — most smart home IoT devices remain WPA2 regardless of release year.
	Thermostats & HVAC	Smart thermostats, smart vents, air quality monitors	Nest Learning Thermostat (1st–3rd gen, 2011–2022), Ecobee (SmartThermostat 2019 and older, pre-Premium/Essential), Honeywell Home T-series (T5/T6/T9, 2016–2023). Note: Ecobee Premium/Essential (2022+) and Nest 4th gen (2023+) do support WPA3.
	Security & Cameras	Indoor/outdoor cameras, video doorbells, baby monitors, NVR systems	Ring (all models officially WPA2-only through 2025), Wyze (V1–V3, 2017–2022), Arlo (Ultra/Pro/Pro2/Pro3, 2017–2021), Blink (all models, 2016–2024), Eufy (pre-2023 models).
	Smart TVs & Streaming	Smart TVs, streaming sticks, media boxes, older streaming players	Samsung TVs (2021 and older; many 2022 Crystal UHD/QLED also have WPA3 issues), LG TVs (2021 and older), Vizio TVs (pre-2023 models), Roku (all models pre-Ultra 2024), Fire TV Stick (1st–4th gen 2014–2022; 4K Max 1st gen 2021), Chromecast (1st–3rd gen 2013–2020; Google TV HD 2022), Apple TV 4K (1st/2nd gen, 2017–2021).
	Game Consoles (Older)	Previous-gen consoles and current-gen models without 6GHz support	PS4/PS4 Pro (2013–2020, WiFi 4/5), Xbox One/One X/One S (2013–2020, WiFi 4/5), Xbox Series S & X (2020–present, WiFi 5 only — no 6GHz), Nintendo Switch all variants (2017–2024, WiFi 5, WPA2 only per Nintendo specs), Wii U (2012–2017).


Device Category		Device Types	Common Brands / Examples
	Older Phones & Tablets	Smartphones and tablets released before WPA3/6GHz support	iPhone 11 and older (2019 and earlier, pre-WiFi 6), Android phones pre-2021 (no WiFi 6E), iPad pre-2022 (before 4th gen Pro 11-inch / 6th gen Pro 12.9-inch), Kindle Fire (all generations through 2024), Samsung Galaxy Tab pre-S8 (2021 and older).
	Smart Speakers & Displays	Voice assistants, smart displays, older wireless speakers	Amazon Echo (1st–4th gen, 2014–2020; 5th gen 2022 marginal), Google Home original (2016), Nest Mini (2019), Nest Audio (2020), Sonos (pre-Era 100/300 — One, Beam, Arc, Five, Play series through 2022), Bose SoundTouch (2013–2020, discontinued).
	Smart Appliances & IoT	WiFi appliances, robot vacuums, garage openers, pet feeders, smart locks	iRobot Roomba (i1–i7, j5–j7 series, 2019–2022), Chamberlain/MyQ (all models through 2024), August/Schlage smart locks (all models through 2024), Samsung/LG smart appliances (2022 and older).
	Older Laptops & PCs	Laptops and desktops without a WiFi 6E or 6GHz wireless adapter	Any laptop manufactured before 2021 (no WiFi 6E chipset); laptops/PCs without an Intel AX210/AX411 or AMD RZ616 adapter; most business-class desktops with standard wireless cards through 2022.

Legacy Device Reference — Devices That Stay on WPA2


On Trouble Calls, you may come across the customer's network showing only WPA2. If so, follow the steps below. In the example below, let's assume you just pulled up their Node in Frontline. And you only see WPA2 network set up. Click on the 3 dots to enter the Network Configuration Settings.

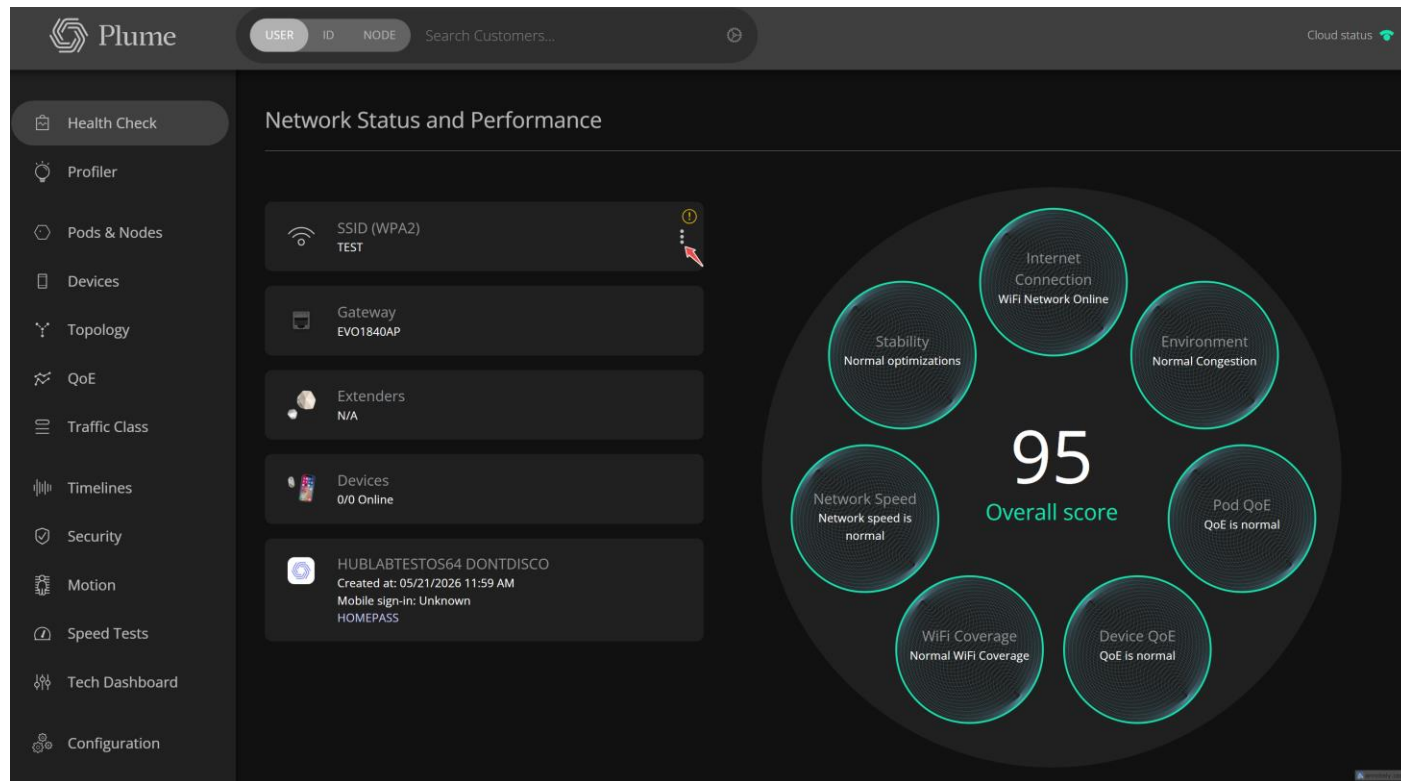


Next, click on WPA3 Transition which will trigger a confirmation popup box to appear.

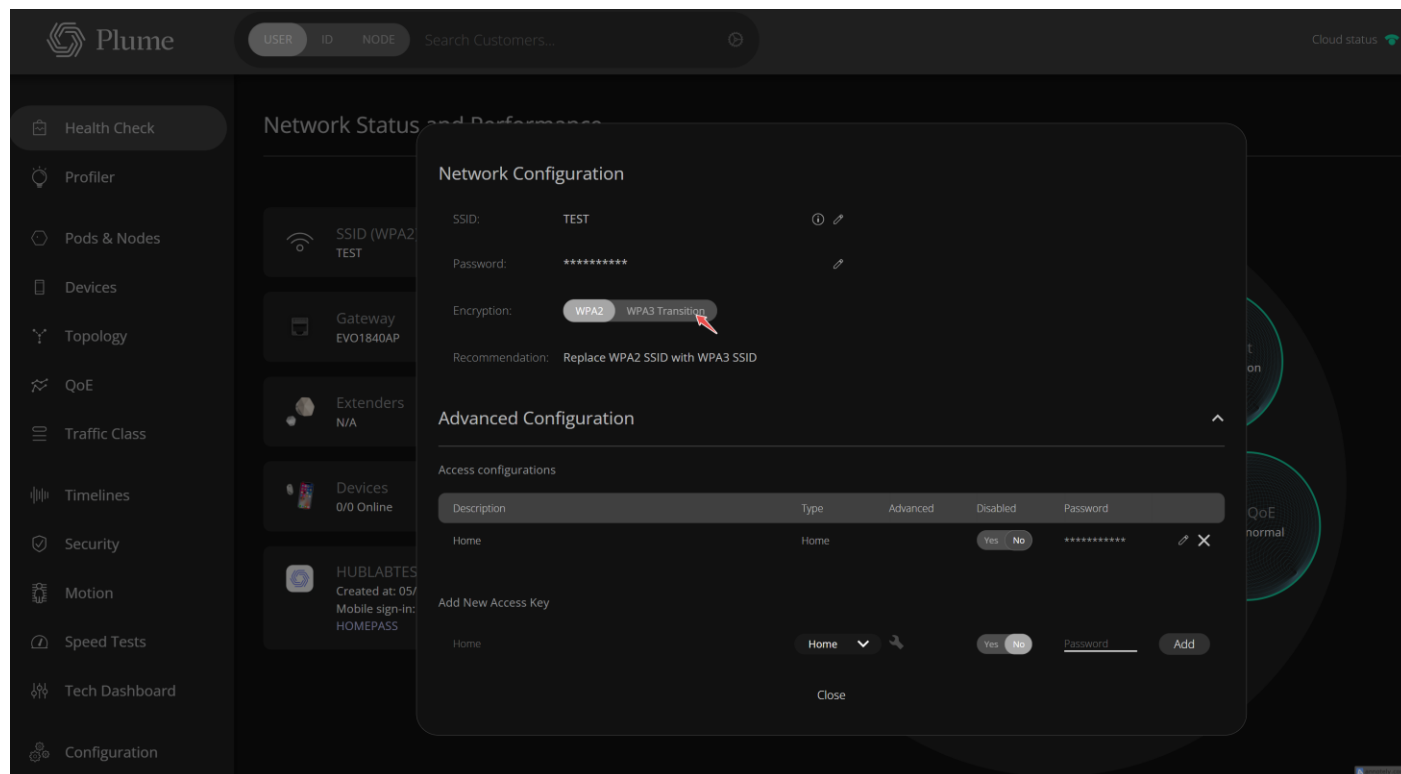


Click on the Confirm button to proceed.

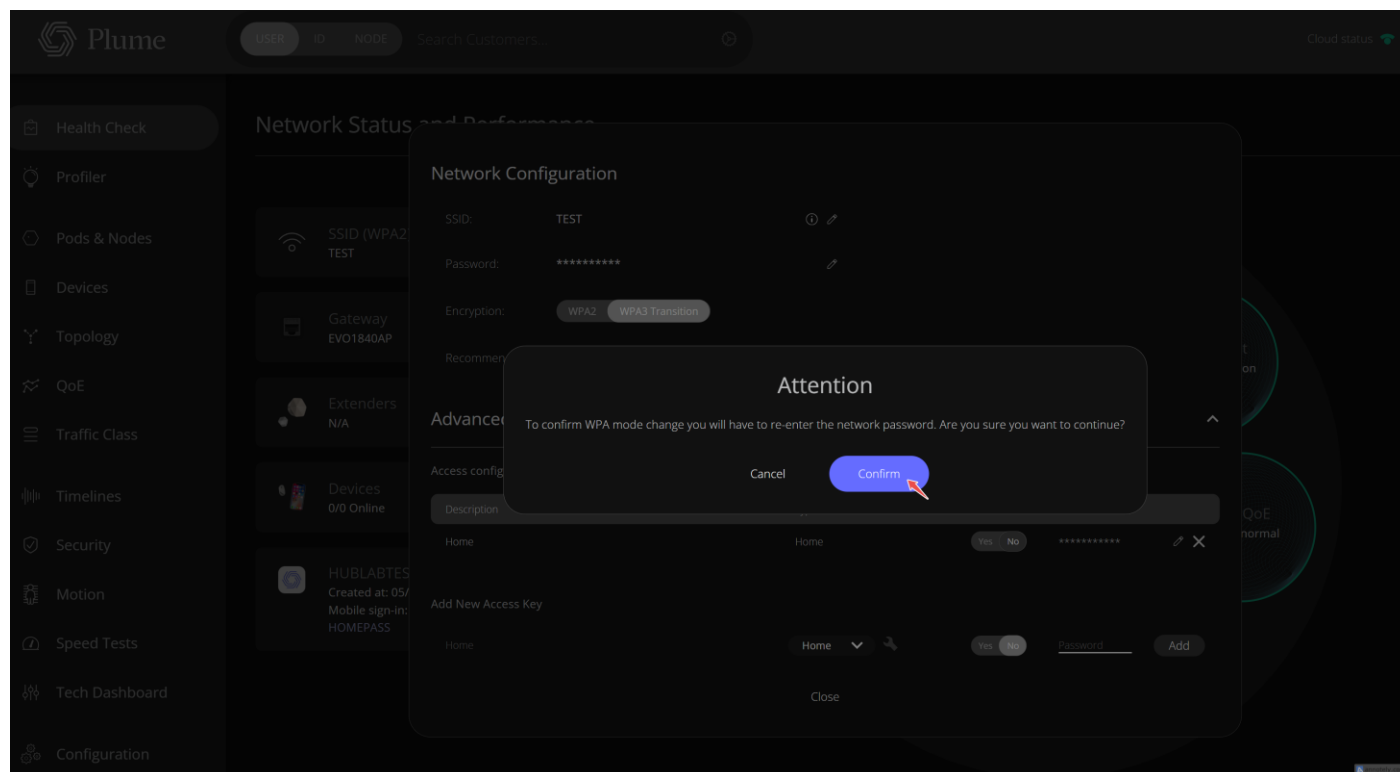


Next, enter the same password that the customer has for their network, do not change it. Also note, that at this step, frontline has already set the Encryption toggle to WPA3 Transition.

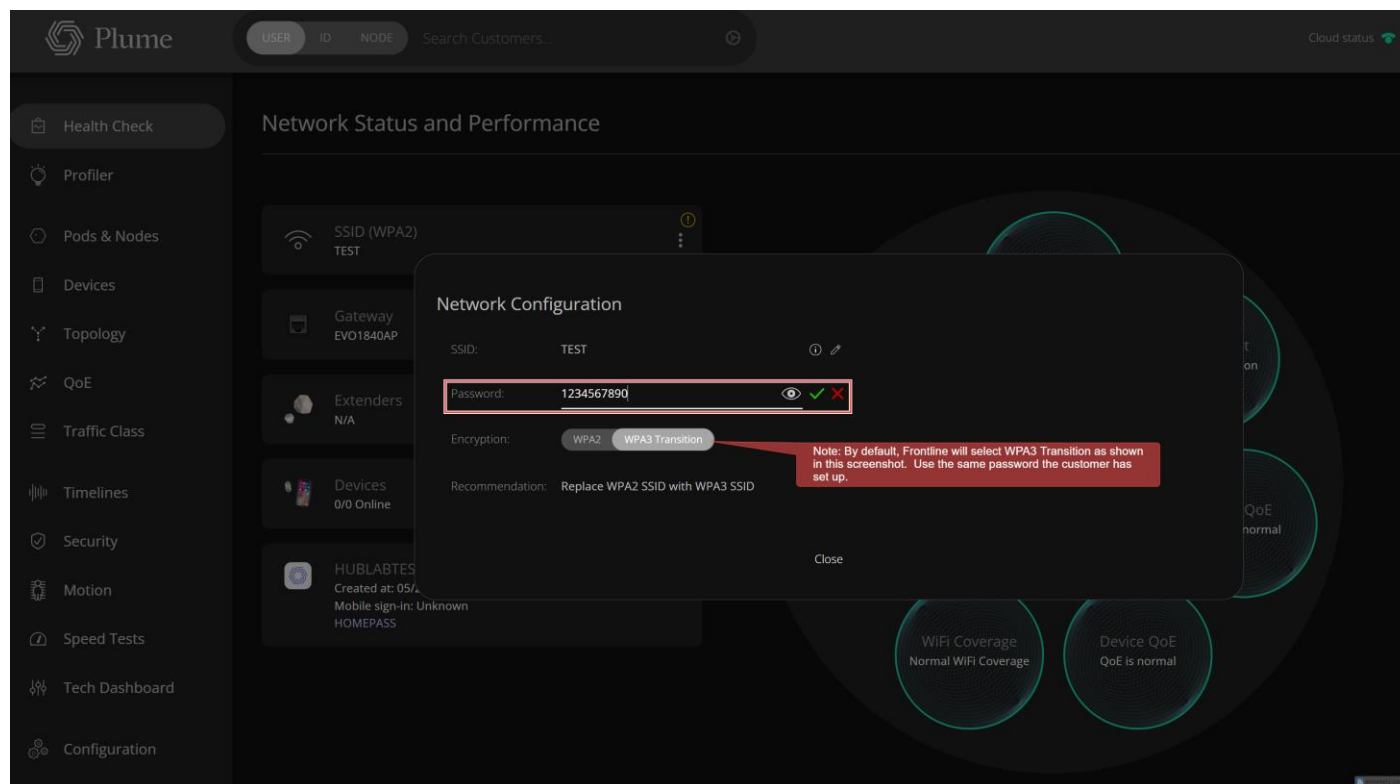


After entering the same password that the customer has been using, click on the close button.

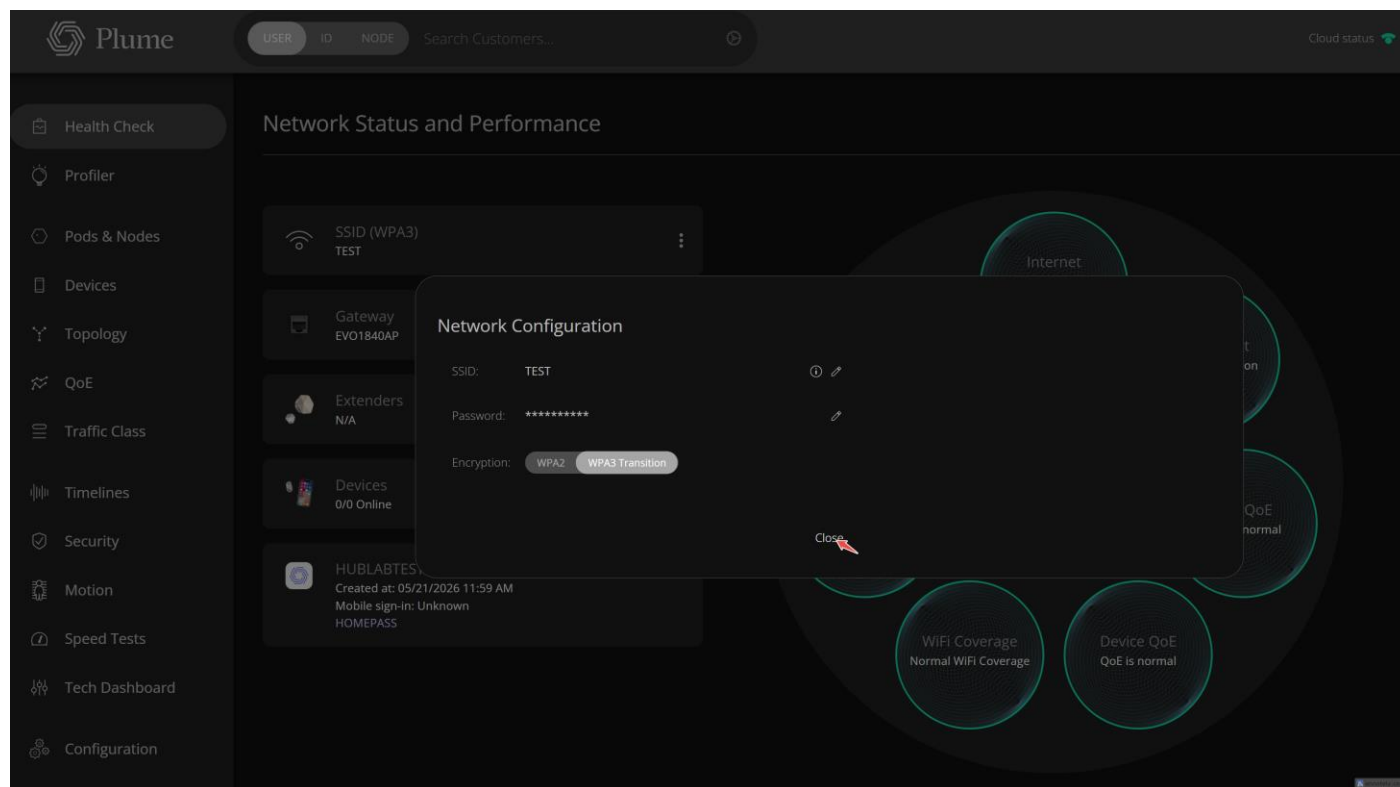


When you go back to Health Check, you'll note that WPA3 has been set up successfully. Now we need to create the WPA2 network for the customers' legacy devices. Proceed to click the 3 dots again to access the Network Configuration section.

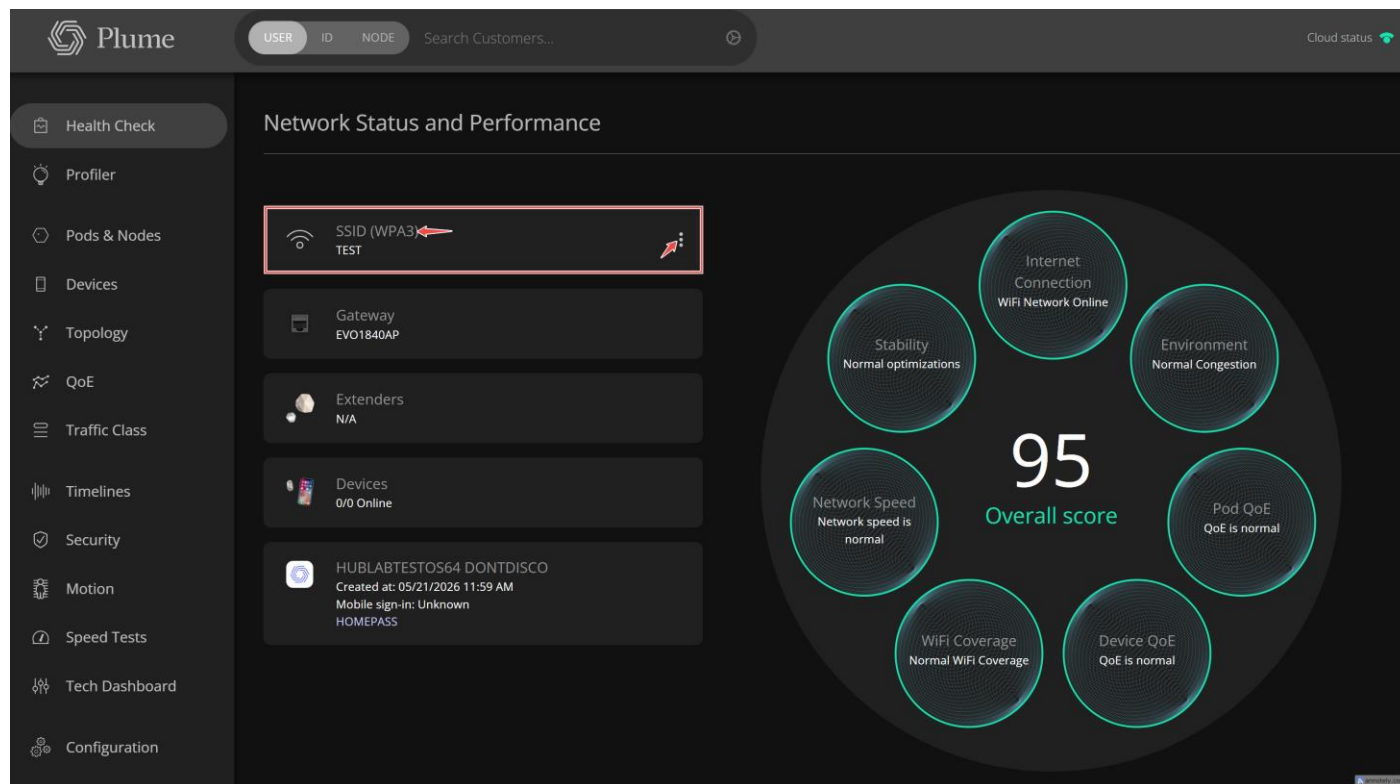


Next, click on WPA2.

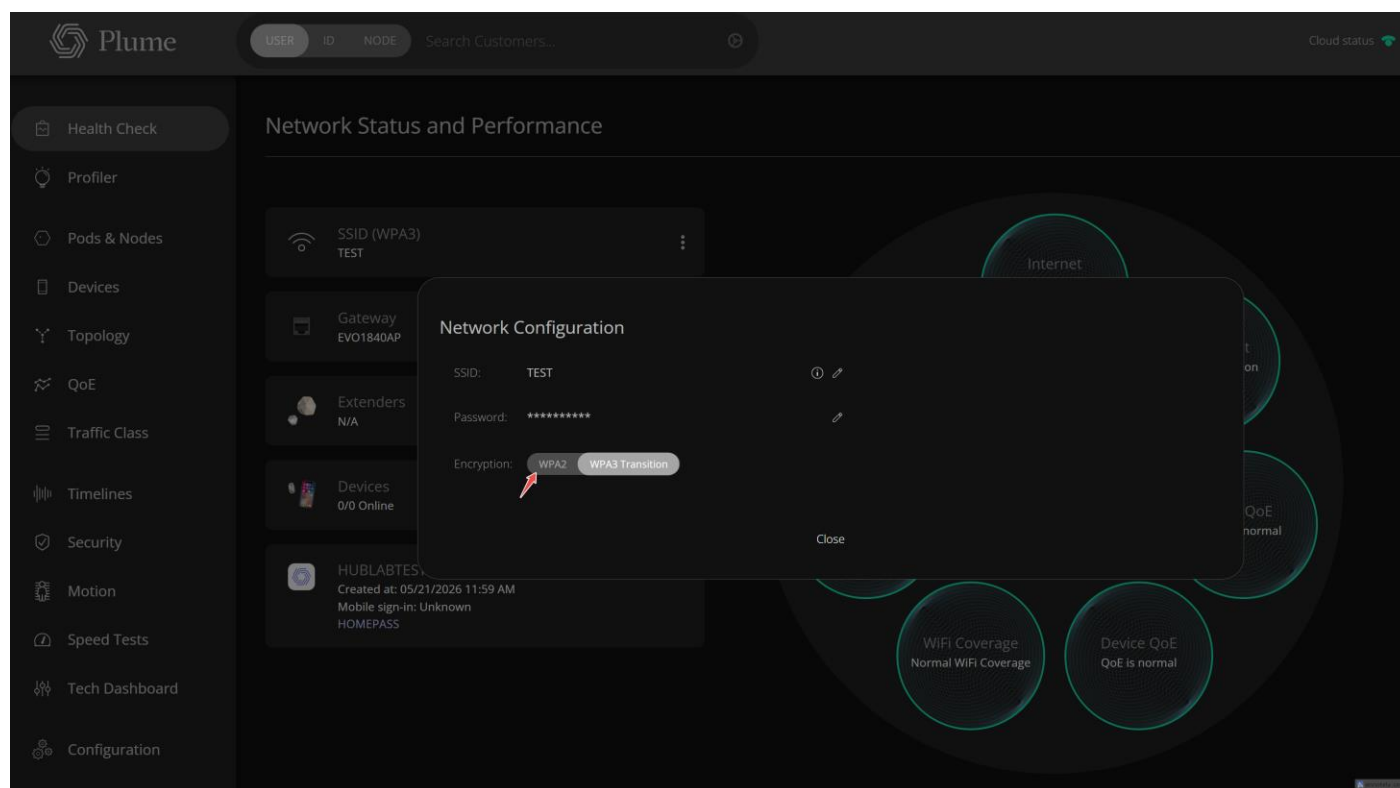


Click on the Confirm button to proceed.

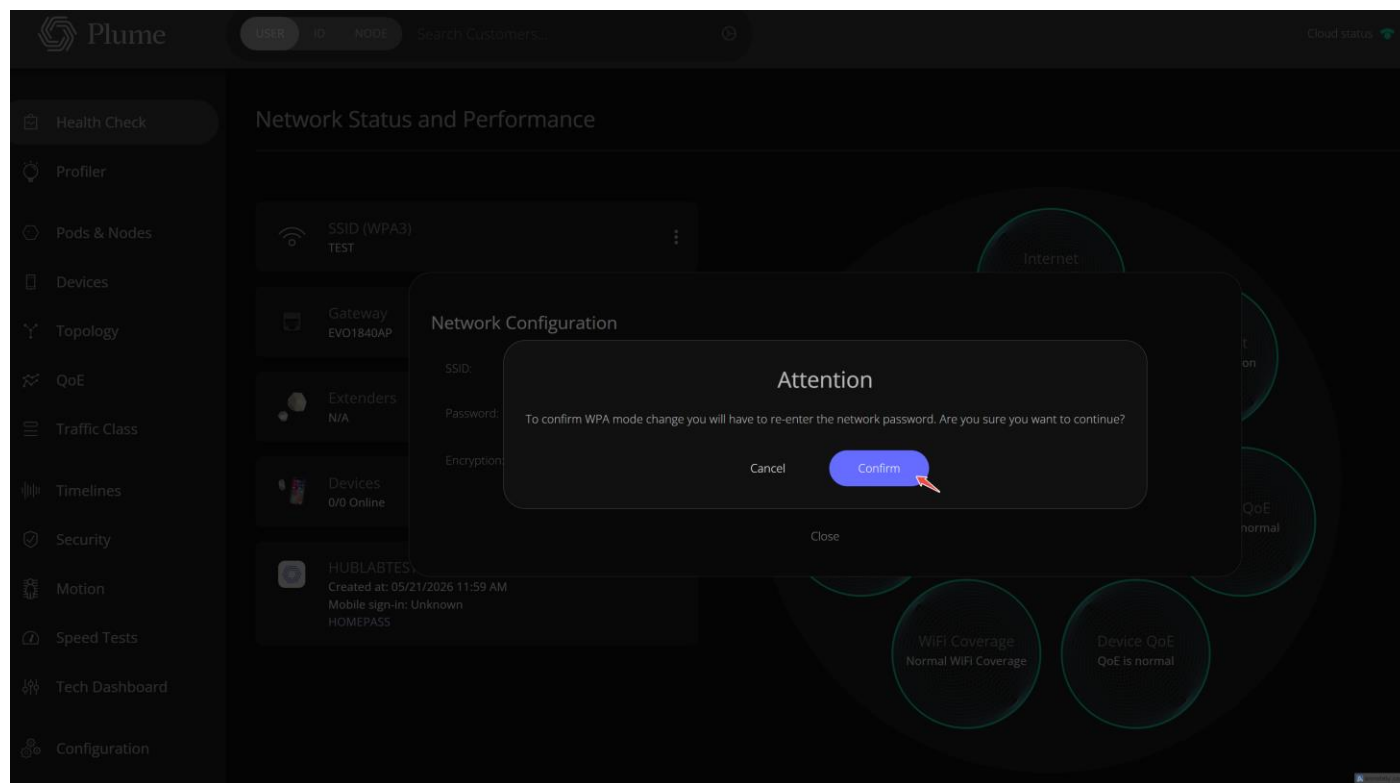


Enter the same password that the customer is using. Do not change the SSID at this point. After entering the password click the green checkmark. Then click the close button at the bottom.

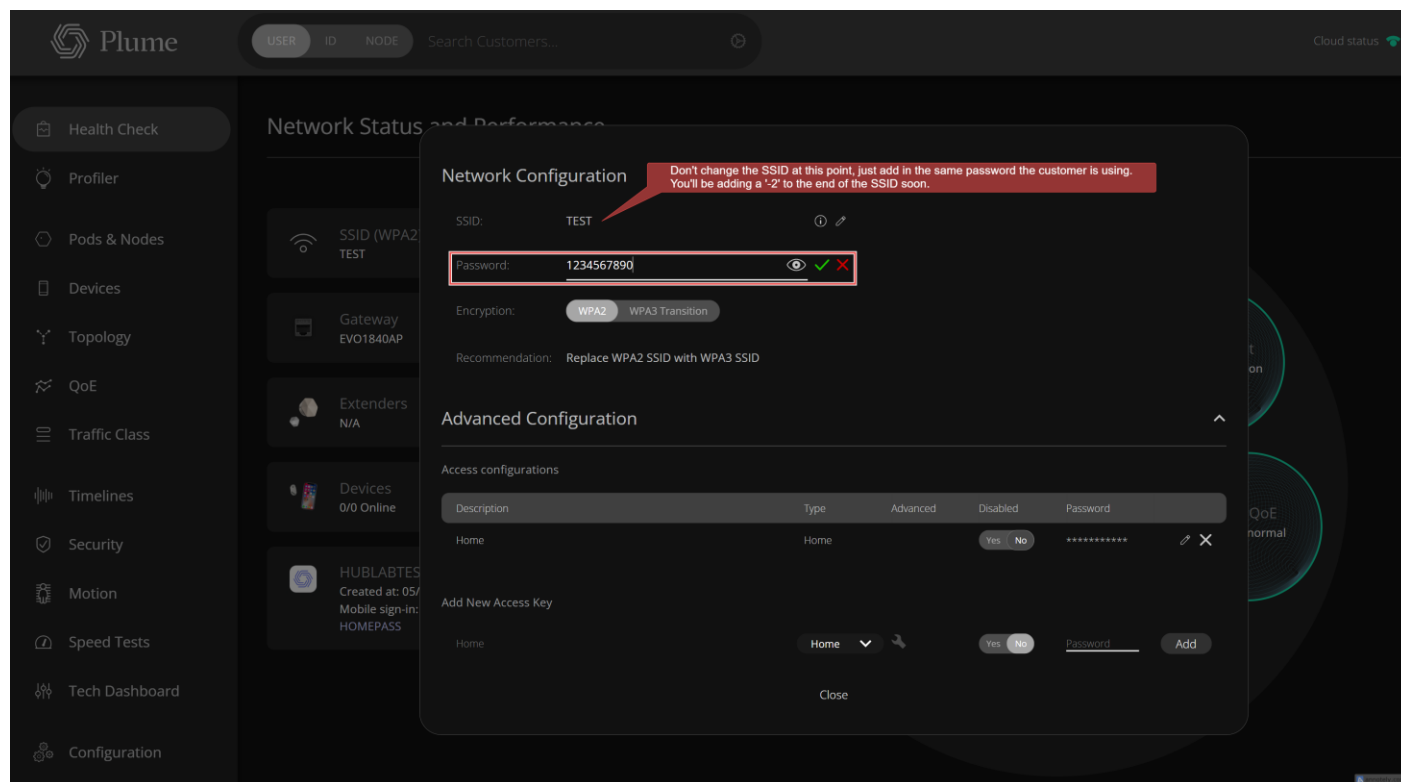


Next, click on the pencil icon and update the SSID by keeping the same name and adding just a '-2' to the end of it. Note: changing the SSID at the same time in the above step causes Frontline to overwrite changes and you'll have to start over. So keep the steps separate.

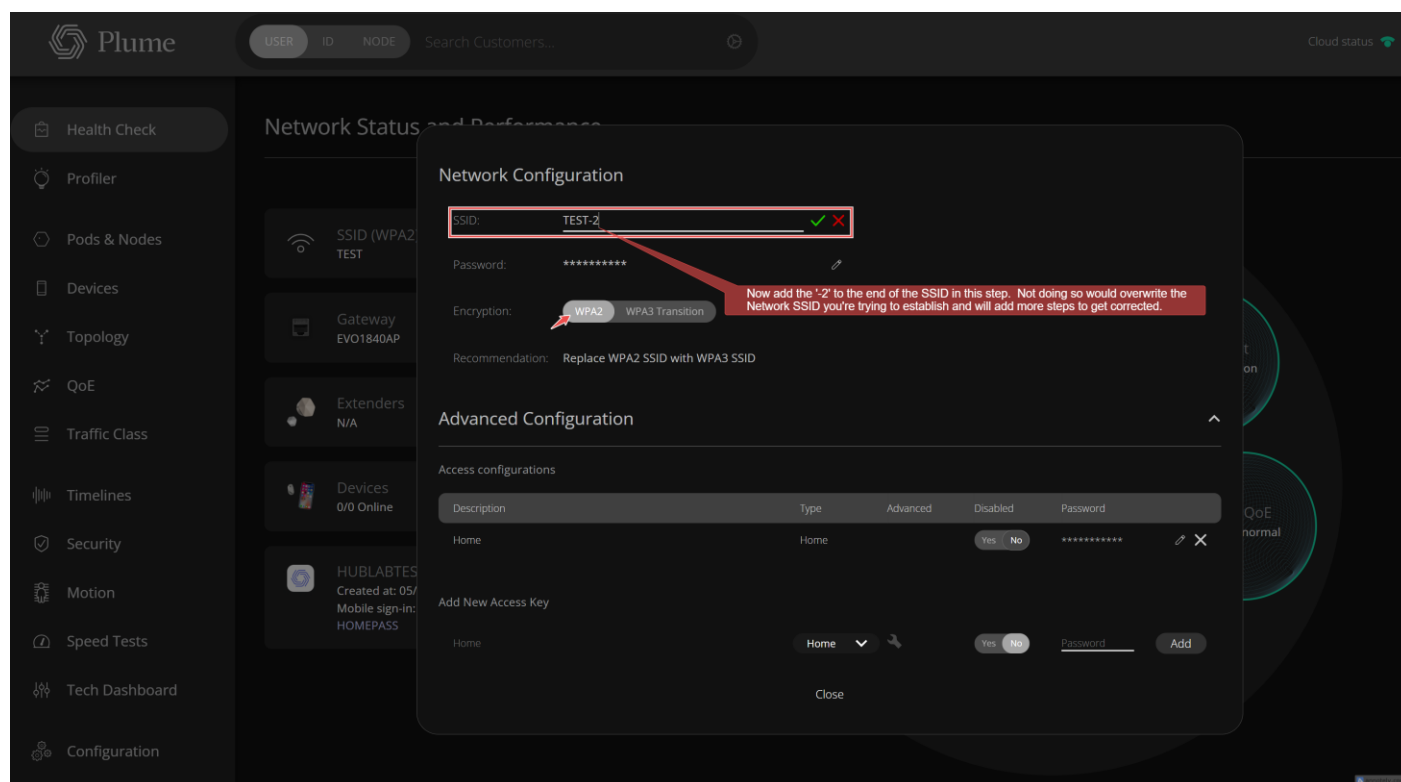


You'll notice that in Network Configuration, it will look like the screenshot below. Your next step is to add an Access Key. Enter in a different temp password and click the add button to create the Access Key as shown below. Keep in mind you may need to scroll down to see the Add button depending on the size of the screen on your device.

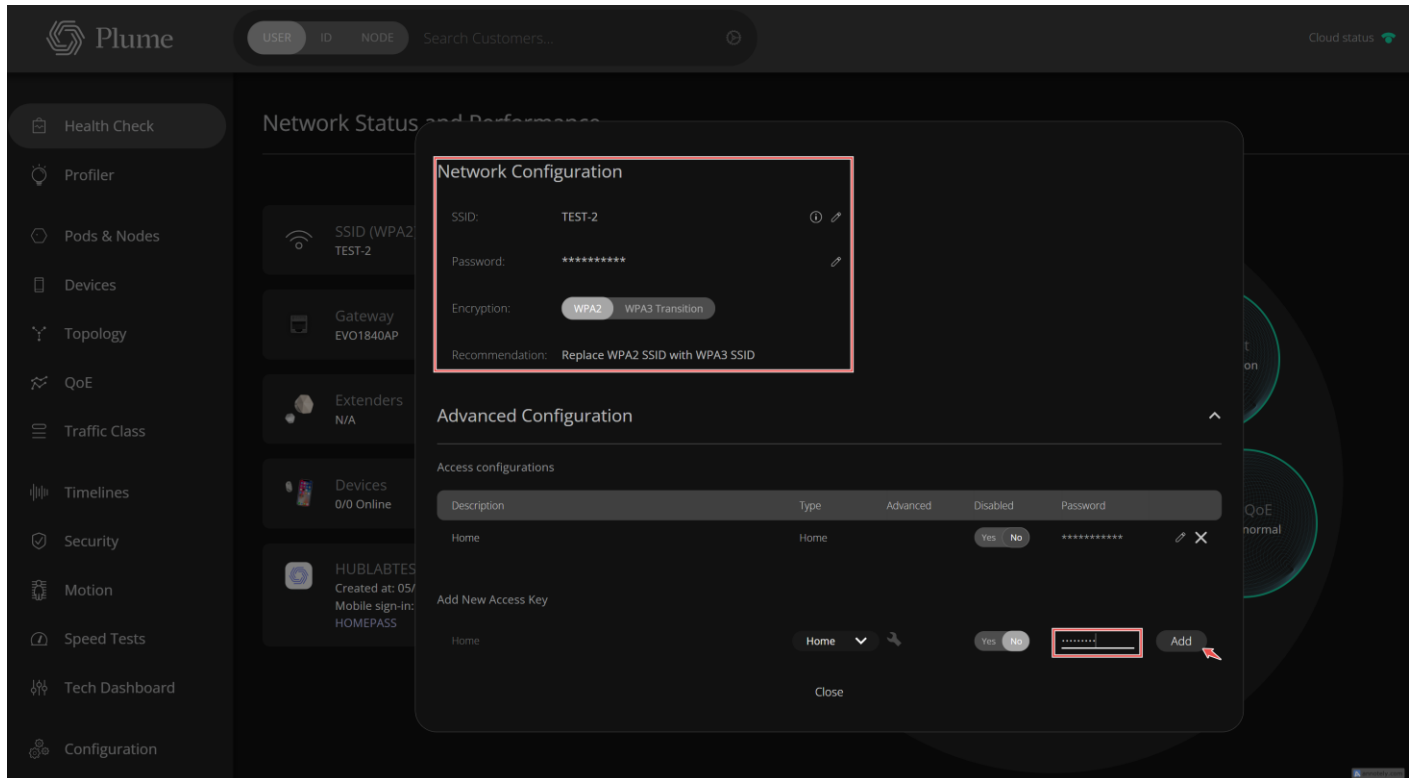


Once you've done so, your screen will look like the screenshot below. Click on Close at the bottom.

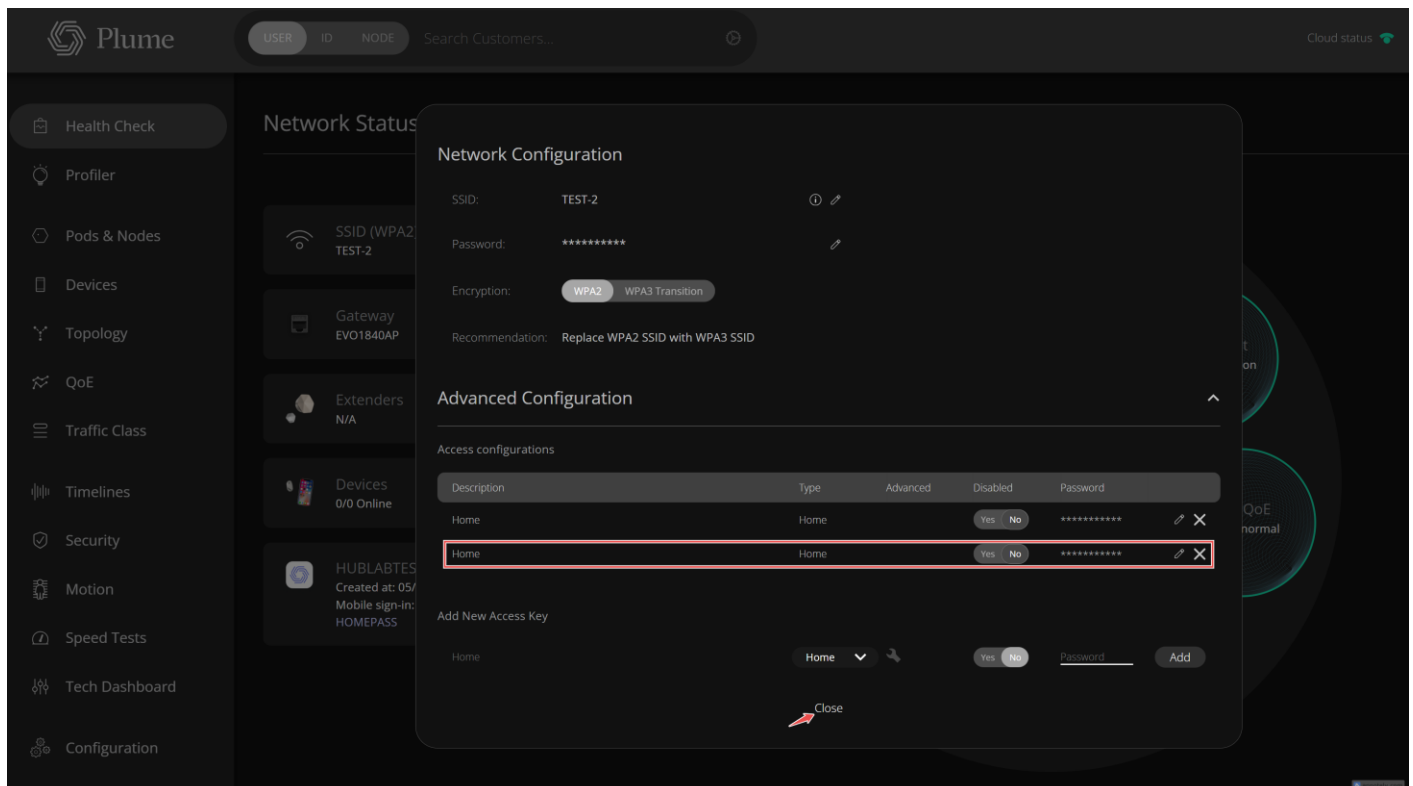


CTRL-R on your keyboard to refresh the screen. If on mobile or tablet, swipe down from the top and hold for 2 seconds and release. You will now see a button that says, “Execute”. Click on it.

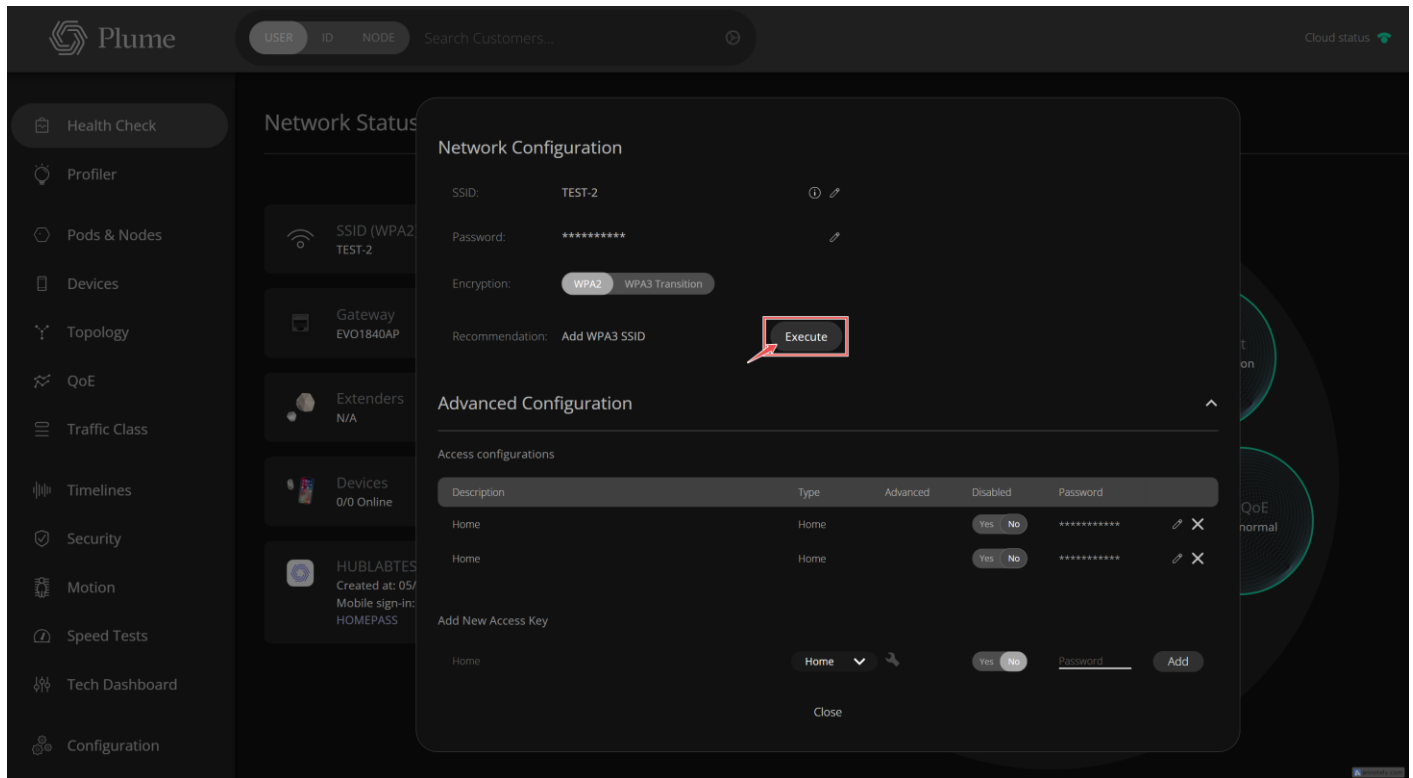


Type in the SSID without the ‘-2’ at the end and click the Add button to proceed.

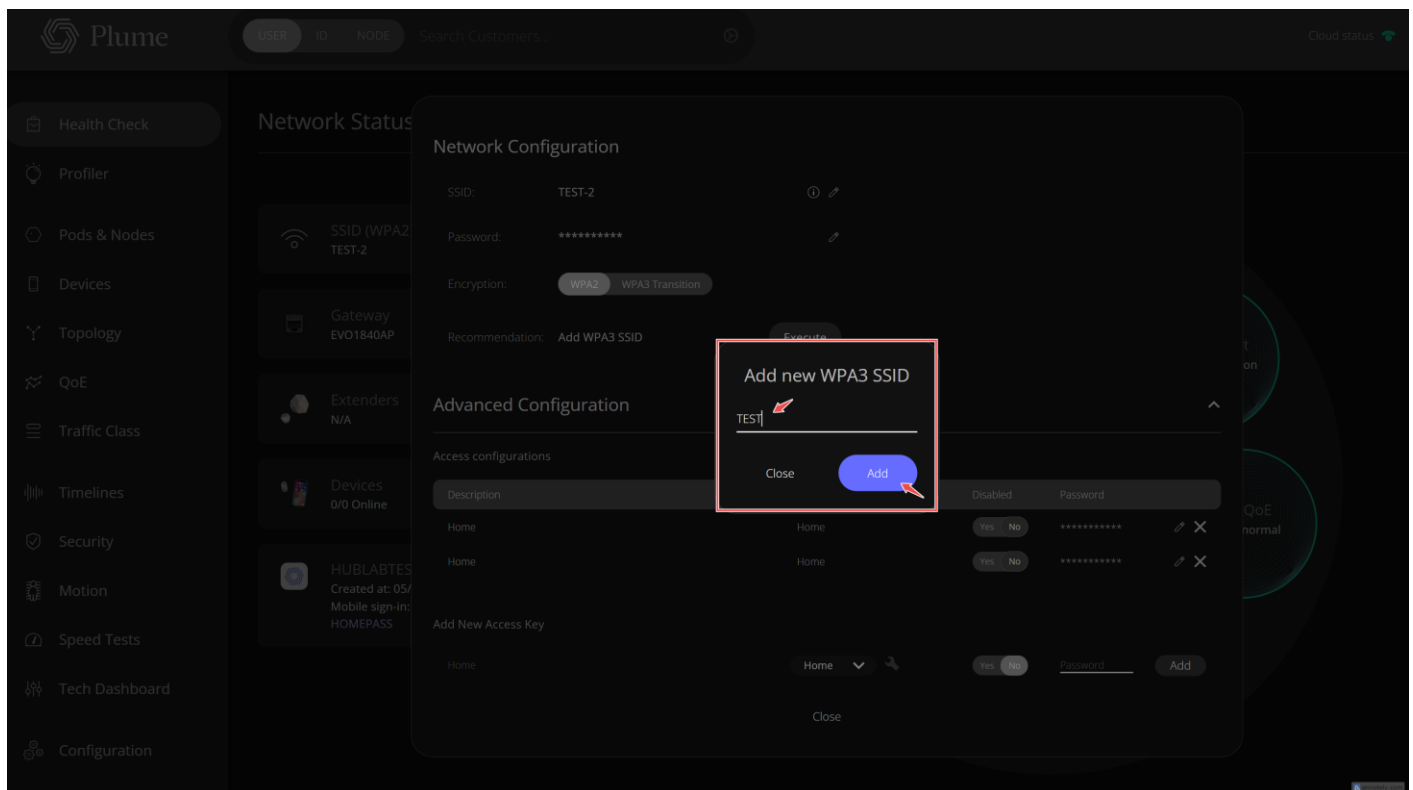


Now when you head back to the Health Check screen, you will see the 2 separate networks. Keep in mind that the WPA2 SSID will always be labeled with the '-2' at the end. This will be used by the customers' older devices.

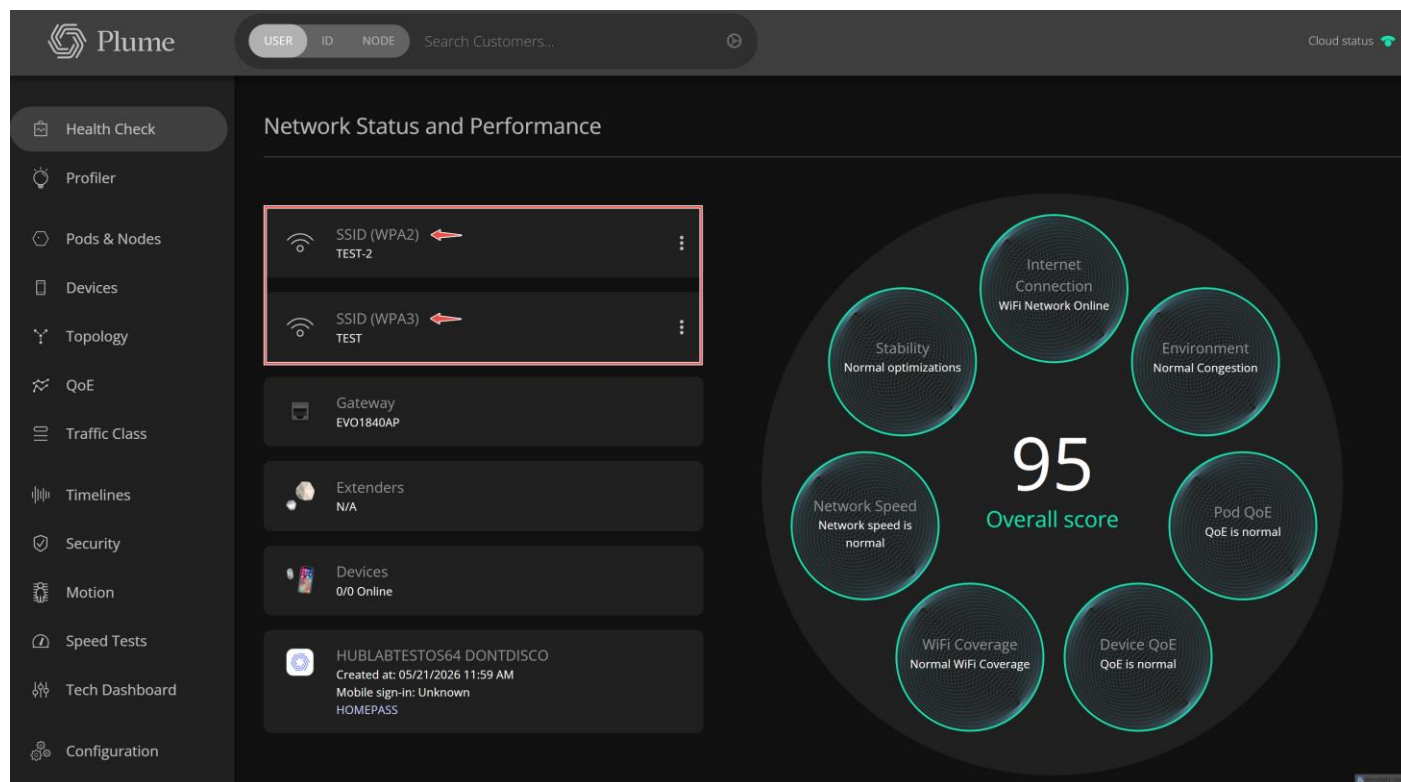

Next, head over to the Tech Dashboard. You may note that Onboarding shows "Not Complete" and clicking on it to initiate will cause a pop up to appear at the top right-hand side of the screen.

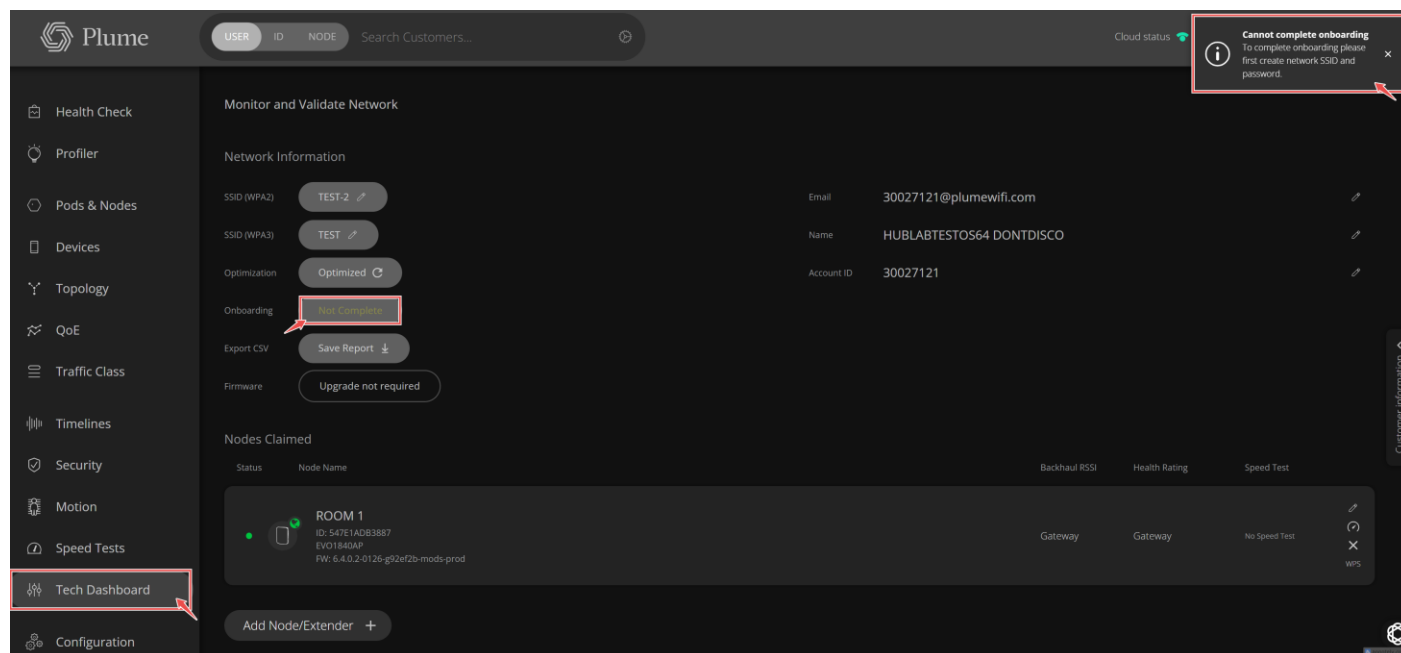

Simple fix, click on Configuration and expand “Onboard and Backhaul”. Next, click on the Complete Onboarding button.

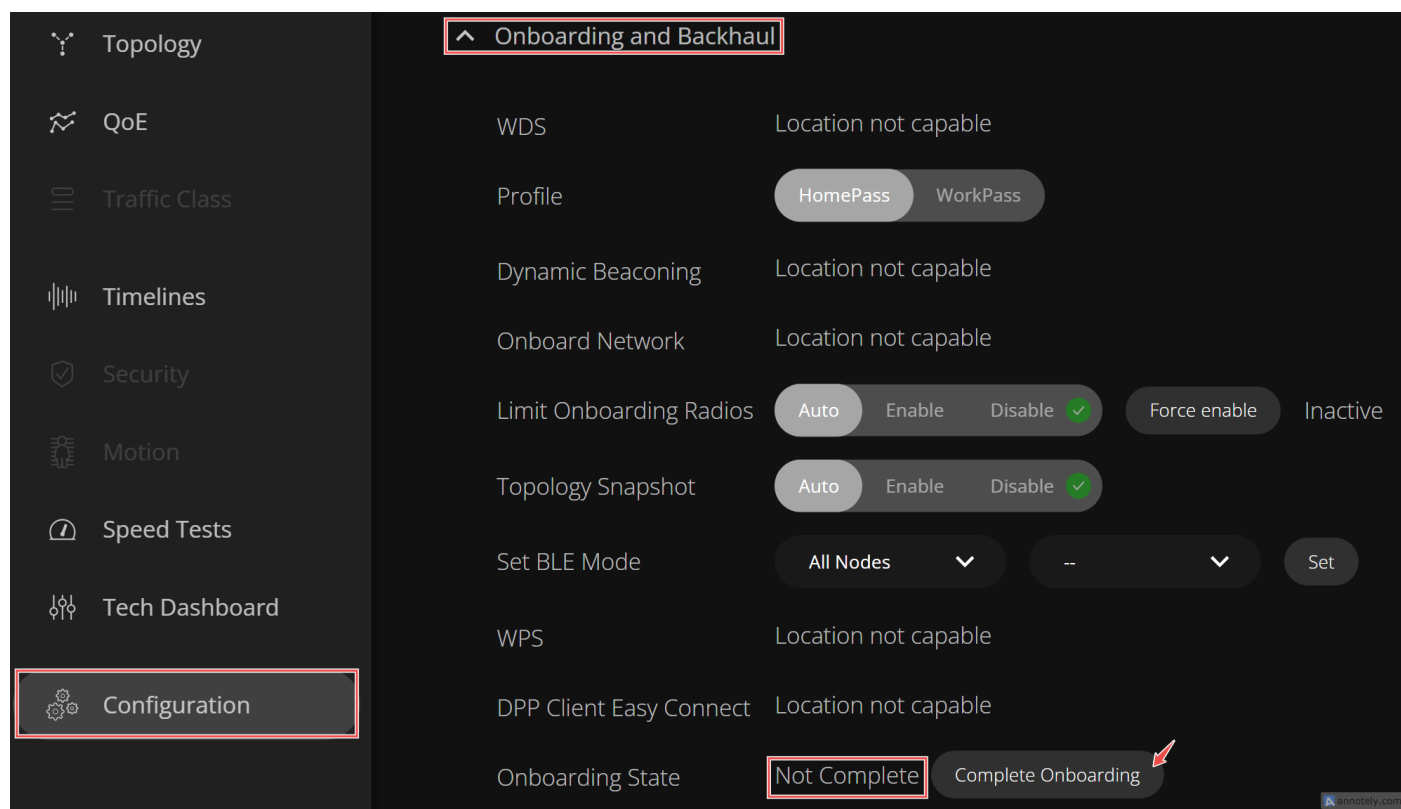

When you go back to the Tech Dashboard, you’ll see that Onboarding Complete is displayed. At this point you’re done. Now for any Legacy devices (older devices), forget the network and join the SSID “TEST-2”. All others that are WPA3 compatible will automatically join the “TEST” network on its own. It is critical that you steer the devices, accordingly, use the [Legacy device reference](#) to help determine which devices would benefit from WPA2 over WPA3 and steer accordingly by forgetting the network and joining the proper network.

